


User manual

## HANDYSCOPE **2**

a multifunctional  
PC measuring instrument

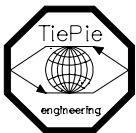

TiePie engineering

## ATTENTION!

Measuring directly on the LINE VOLTAGE can be very dangerous. The OUTSIDE of the BNC CONNECTORS at the HANDYSCOPE **2** are connected with the GROUND of the computer.

Use a good isolation transformer or a differential probe when measuring at the LINE VOLTAGE or at GROUND-ED POWER SUPPLIES!

In case this has not been considered and the GROUND of the HANDYSCOPE **2** is connected to a positive voltage, a short-circuit current will be flowing. Because of this short-circuit current both the HANDYSCOPE **2** and the computer can be damaged.


Despite the care taken for the compilation of this user manual, **TiePie engineering** can not be held responsible for any damages resulting from errors that may appear in this book.

All rights reserved. No part of this book may be reproduced, stored in a database or retrieval system, or published, in any form or in any way, electronically, mechanically, by print, photoprint, microfilm or any other means without prior written permission from **TiePie engineering**.

User manual

**HANDYSCOPE 2**

a multifunctional  
PC measuring instrument

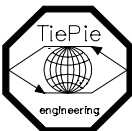

TiePie engineering



# Contents

---

---

<b>Safety</b> .....	<b>5</b>
<b>Declaration of conformity</b> .....	<b>7</b>
<b>Introduction</b> .....	<b>9</b>
Sampling .....	9
- Aliasing .....	10
Digitizing .....	11
The oscilloscope .....	12
The spectrum analyzer .....	13
The voltmeter .....	14
The transient recorder .....	15
The probes .....	16
<b>Hardware installation</b> .....	<b>17</b>
<b>Software</b> .....	<b>19</b>
Structure of the program .....	20
Starting the program .....	20
Controlling the program .....	21
- Controlling by mouse .....	21
- Controlling the main menu .....	21
- Controlling popup menus .....	22
Help screens .....	23
Program settings .....	23
- Setting the main menu type .....	23
- Saving instrument settings .....	24
- Loading instruments settings .....	25
- Setting the file type for measurement data .....	25
- Setting the location of files .....	26
- Setting the printer port .....	26
- Setting the printer type .....	26
- Default text on the printer output .....	27
- Setting the screen colors .....	27

Storing measurement data on disk . . . . .	27
Loading saved measurement data . . . . .	28
Printing measured data . . . . .	28
Choosing an instrument . . . . .	29
Terminating the program . . . . .	30
<b>Oscilloscope (device: LIVE) . . . . .</b>	<b>31</b>
Aliasing . . . . .	31
Displaying channels . . . . .	32
Setting up a channel . . . . .	33
- Setting the sensitivity of a channel . . . . .	33
- Setting the signal coupling . . . . .	33
- Setting the vertical position of a channel . . . . .	34
- Enlarging or reducing the vertical axis . . . . .	35
- Changing the units of the vertical axis . . . . .	36
Setting up the time axis . . . . .	37
- Setting the timebase . . . . .	37
- Magnification of the horizontal axis . . . . .	38
Triggering . . . . .	38
- Selecting the trigger source . . . . .	39
- Setting the trigger hysteresis . . . . .	39
- Setting the trigger slope . . . . .	40
- Adjusting the trigger level . . . . .	40
- Setting the trigger time-out . . . . .	41
- Stopping the display . . . . .	42
Magnifying a part of the screen . . . . .	42
Measuring with the cross hair . . . . .	42
<b>Storage oscilloscope (device: HOLD) . . . . .</b>	<b>45</b>
Differences with the oscilloscope . . . . .	45
Automatic storage of measurement data . . . . .	45
<b>Spectrum analyzer (device: SPECTRUM) . . . . .</b>	<b>47</b>
Description of FFT . . . . .	47
- Aliasing . . . . .	48
- Windowing . . . . .	48
Similarities with the oscilloscope . . . . .	53
Displaying channels . . . . .	53
Setting up a channel . . . . .	53
- Setting the sensitivity . . . . .	53

- Adapting the vertical axis	54
Setting up the frequency axis	54
- Magnifying the frequency axis	54
Selecting the window	55
Averaging of spectra	55
Starting a spectrum measurement	55
Measuring a harmonic distortion	56
Calculate the spectrum from the HOLD signal	56
<b>Voltmeter (device: VOLT)</b>	<b>57</b>
Setting up a channel	57
- Setting the input range	57
- Setting the signal coupling	58
- Displaying the measured value	58
Displaying the measured values	59
- Set the number of displays	59
- Selecting the possibilities of the displays	60
- Processing the measured data	60
- Changing the units of measure	61
- Changing the units per volt	61
- Relative measurements	62
- Comparison measurements	62
- Setting the impedance	63
Setting the frequency range	63
Perform measurements	64
Storing measurement values on disk or paper	64
- Setting the time between two measurements	65
- Start an acquisition	65
Changing the display characters	66
<b>Transient recorder (device: TRANS)</b>	<b>67</b>
Setting the measuring type	67
- Setting the frequency range	68
Setting the sampling time	68
Setting the number of samples	69
Clear the screen	69
Start a measurement	69
Go to a specific sample	70
<b>Specifications</b>	<b>71</b>

Hardware	71
- A/D convertor	71
- General	71
Software	72
- Common	72
- Oscilloscope	72
- Spectrum analyzer	73
- True RMS voltmeter	73
- Transient recorder	74



# Safety

---

---

Before you start working with the **HANDYSCOPE 2**, first read these safety rules.

- Avoid working **alone**.
- Check the probes / test leads for damages. Do **NOT** use them if they are damaged.
- Take care when measuring at voltages higher than 25V AC or 60 V DC.
- Measuring directly on the LINE VOLTAGE can be very dangerous. The **OUTSIDE** of the BNC CONNECTORS at the **HANDY-SCOPE 2** are connected with the **GROUND** of the computer.  
Use a good isolation transformer or a differential probe when measuring at the LINE VOLTAGE or at GROUND POWER SUPPLIES!  
In case this has not been considered and the **GROUND** of the **HANDYSCOPE 2** is connected to a positive voltage, a short-circuit current will be flowing. Because of this short-circuit current both the **HANDYSCOPE 2** and the computer can be damaged.
- Do not connect the **HANDYSCOPE 2** to other ports at your PC than the Centronics parallel printer port. Connecting the **HANDY-SCOPE** to any other port may damage your **HANDY-SCOPE 2**.



# Declaration of confirmity

 **TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
Nederland

**EG-verklaring van overeenstemming**

Wij verklaren geheel onder eigen verantwoordelijkheid, dat het product

**HANDYSCOPE 2**


waarop deze verklaring betrekking heeft, in overeenstemming is met de geharmoniseerde Europese normen

EN 55011, EN 55022, EN 50081-1 en EN 50082-1

Volgens de bepalingen van de EMC-richtlijn 89/336/EEG, gewijzigd door de richtlijn 92/31/EEG en 93/68/EEG

Sneek, 2-1-1996 ir. A.P.W.M. Poelsma



 **TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

**EC declaration of Conformity**

We declare, on our own responsibility, that the product

**HANDYSCOPE 2**


for which this declaration is valid, is in compliance with

EN 55011, EN 55022, EN 50081-1 and EN 50082-1

according to the conditions of the EMC standard 89/336/EEG, and the amendments 92/31/EEC and 93/68/EEC

Sneek, 2-1-1996 ir. A.P.W.M. Poelsma



 **TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

**EG - Konformitätserklärung**

Wir erklären, in Eigenverantwortlichkeit, hiermit, daß das Produkt


**HANDYSCOPE 2**

für das diese Erklärung gültig ist, mit

EN 55011, EN 55022, EN 50081-1 und EN 50082-1,

gemäß den Anforderungen des EMC-standards 89/336/EEC, und den Zusatzbestimmungen 92/31/EEC und 93/68/EEC übereinstimmt.

Sneek, 2-1-1996 ir. A.P.W.M. Poelsma



 **TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

**Déclaration de conformité C.E.**

Nous déclarons, sous notre responsabilité, que le produit

**HANDYSCOPE 2**

pour lequel cette déclaration est valide, est conforme aux:

EN 55011, EN 55022, EN 50081-1 et EN 50082-1

selon les conditions du standard CEM N° 89/336/EEC, et les amendements 92/31/EEC et 93/68/EEC

Sneek, 2-1-1996 ir. A.P.W.M. Poelsma





**TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

### Dichiarazione di Conformita' CE

Dichiariamo sotto la nostra esclusiva responsabilità che il prodotto:

#### HANDYSCOPE 2

per il quale vale la presente dichiarazione, è conforme alle norme

EN 55011, EN55022, EN50081-I e EN50082-I

conformemente alle condizioni della normativa EMC 89/336/EEC, e successive modifiche 92/31/EEC e 93/68/EEC.

Sneek, 2-1-1996

ir. A.P.W.M. Poelsma



**TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

### EC-declaración de conformidad

Nosotros declaramos, bajo nuestra propia responsabilidad, que el producto

#### HANDYSCOPE 2

para el cual esta declaración es válida, está en relación con

EN55011, EN 55022, EN 50081-I y EN 50082-I

Según las condiciones del EMC estándar 89/336/EEC, y los movimientos 92/31/EEC y 93/68/EEC

Sneek, 2-1-1996

ir. A.P.W.M. Poelsma



**TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

### EF-Overensstemmelseserklæring

Undertegnede erklærer herved, at følgende apparat overholder beskyttelseskravene i Rådets direktiv 89/336/EØF om elektromagnetisk kompatibilitet (EMC).

Identification af apparat:

Kategori: Måleinstrument

Model/type: **HANDYSCOPE 2**

Standarder der er anvendt som grundlag for erklæring, eller henvisning til den prøvningsrapport, der er udstedt af et betydningsfuldt laboratorium:

EN 55011, EN 55022, EN 50081-I og EN 50082-I

CE-mærket angiver kun overensstemmelse med EMC-direktiv 89/336/EØF

Sneek, 2-1-1996

ir. A.P.W.M. Poelsma



**TiePie engineering**  
Kopeslagersstraat 37  
8601 WL Sneek  
The Netherlands

### EC Hyväksyntäilmoitus

Velvollisuutenamme on ilmoittaa, että tuotteemme

#### HANDYSCOPE 2

jota tämä selvitys koskee, on hyväksytty

EN55011, EN 55022, EN 50081-I ja EN 50082-I

EMC standardien 89/336/EEG, ja lisästandardien 92/31/EEC ja 93/68/EEC mukaisesti

Sneek, 2-1-1996

ir. A.P.W.M. Poelsma



---

**Note** before using the **HANDYSCOPE 2**, first read the chapter about **Safety**

---


Many technicians investigate electrical signals. Though the measurement may not be electrical, the physical variable is often converted to an electrical signal, with a special transducer. Common transducers are accelerometers, pressure probes, current clamps and temperature probes. The advantages of converting the physical parameters to electrical signals are large, since several instruments for examining electrical signals are available.

The **HANDYSCOPE 2** is a two channel, 12 bits, 200ksamples/sec measuring instrument. With the accompanying software the **HANDYSCOPE 2** can be used as an oscilloscope, a storage oscilloscope, a spectrum analyzer, a true RMS voltmeter or a transient recorder. All instruments measure by sampling the input signals, digitizing the values, process them, save them and display them.


---

## Sampling

When sampling the input signal, samples are taken at certain moments. The frequency at which the samples are taken is called the sampling frequency. By taking a (large) number of samples, the input signal can be reconstructed.

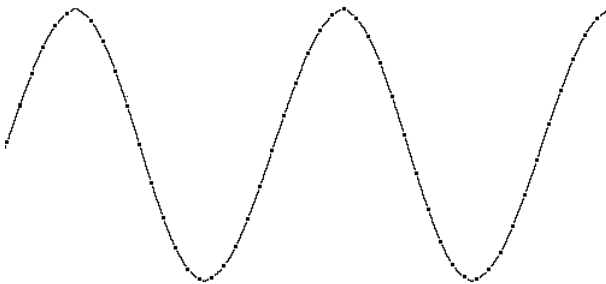

In the latter illustration a sine wave signal is sampled with 50 samples. By connecting the adjacent samples, the original signal can be reconstructed. See also the next illustration.

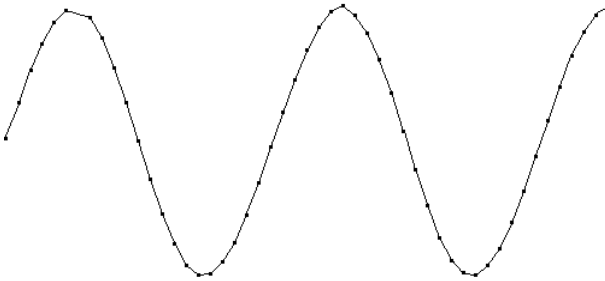


The more samples are taken, the better the signal can be reconstructed. The sampling frequency must be higher than 2 times the highest frequency in the input signal. This is called the Nyquist frequency. Theoretically it is possible to reconstruct the input signal with more than 2 samples. In practice, 10 to 20 samples are necessary to be able to examine the signal thoroughly.

---

## Aliasing


If the sampling frequency is lower than 2 times the frequency of the input signal, 'aliasing' will occur. The following illustration shows how aliasing occurs.

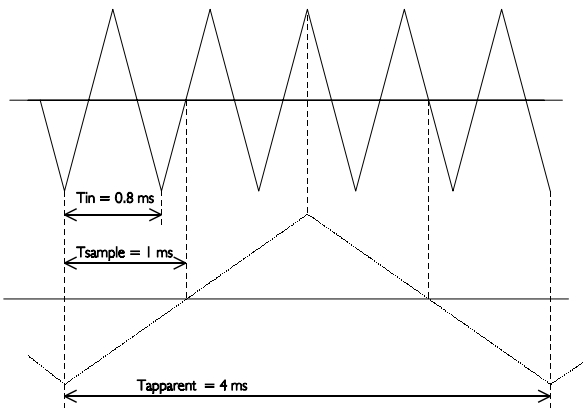

The input signal is a triangular signal with a frequency of 1.25 kHz (upper most in the illustration). The signal is sampled at a frequency of 1 kHz. The dotted signal is the result of the reconstruction. From that triangular signal the periodical time is 4 ms, which corresponds with an apparent frequency (alias) of 250 Hz ( $1.25 \text{ kHz} - 1 \text{ kHz}$ ).

To avoid aliasing, the sample frequency must be higher than 2 times the maximum frequency of the input signal.

Aliasing is not always visible on an oscilloscope. In the latter illustration, it gives a 'good looking' picture. It is not apparent that aliasing occurs. The next illustration gives an example of visible aliasing.

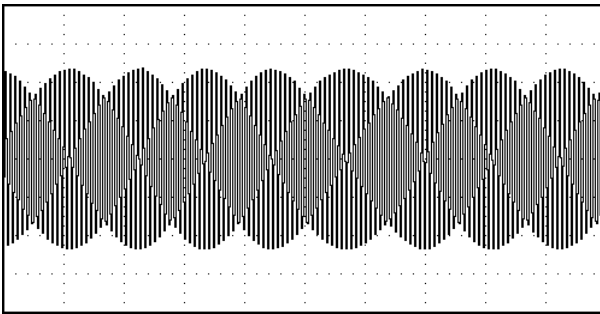

This time it is a sine wave signal with a frequency of 25.7 kHz, which is sampled at a frequency of 5 kHz. The minimal sampling frequency should have been 51.4 kHz. For proper analysis, the sampling frequency should have been 500 kHz.

---

## Digitizing

After taking a sample of the input signal, it is digitised. This is done with an Analog to Digital Converter, ADC. The ADC converts the size of the signal to a digital number. This is called quantifying.

The first condition for accurate measurement is to have as many as possible quantifying steps. This can be realised by using an ADC with a resolution as high as possible.

The resolution of ADC's is often given in bits. The number of bits determines the number of quantifying steps according the formula:

$$\text{number of quantifying steps} = 2^{\text{number of bits}}$$

A 2 bits ADC has 4 quantifying steps. With an input range of 10 Volt, this ADC can divide the input range in 4 parts of each 2.5 Volt.

By increasing the number of bits, the resolution increases, the number of quantifying steps increases and the sub-divisions get smaller.

---

## The oscilloscope

The oscilloscope is an instrument with which electrical voltages varying in time can be displayed. With the oscilloscope time dependent electrical signals can be examined easily. Except for the time domain, functions and dependencies of quantities can also be displayed and examined in the X-Y mode.

The **HANDYSCOPE 2** oscilloscope has two separated inputs (channels), for which the sensitivity of each channel can be set.

The **HANDYSCOPE 2** is equipped with two types of oscilloscopes, LIVE and HOLD. The oscilloscope LIVE measures 1000 samples, 2 page. The oscilloscope HOLD measures 15000 samples, 30 pages.

The sensitivity range for the channels goes from 25 mV/div to 20 V/div. The timebase goes from 0.25 msec/div to 10 sec/div.

The display of the oscilloscope is built of 500 x 256 (wxh) pixels, which corresponds with 10x8 (wxh) divisions. Left and right of the display the units of the 2 channels are displayed. Under the display, the time axis is displayed.



---

## The spectrum analyzer

The common way to examine electrical signals is in the time domain, using an oscilloscope. The time domain is used to determine amplitude, time and phase information, which is necessary to describe the behaviour of an electrical system.

Not all electrical systems can be characterised in the time domain. Circuits like filters, amplifiers, oscillators, mixers, modulators and detectors can be characterised best by their frequency behaviour. That frequency behaviour is best obtained by observing the electrical signals in the frequency domain. To display the frequency domain, an instrument is needed that can distinguish different frequencies from each other and measure the signal size at the different frequencies. An instrument that can display the frequency domain is the spectrum analyzer. It graphically displays voltage as a function of frequency.

In the time domain all frequency components of a signal are seen summed together. In the frequency domain, complex signals (signals composed of more than one frequency) are separated in their frequency components, where the voltage of each frequency component is displayed.

The frequency domain contains information which is not available in the time domain. Therefore the spectrum analyzer has certain advantages compared with an oscilloscope.

- With a spectrum analyzer small harmonic distortions on a signal can be displayed better than on an oscilloscope. A sine wave may look good in the time domain, however in the frequency domain the harmonic distortion is visible.
- A noise signal may look fully random in the time domain, in the frequency domain it can appear that one frequency is dominantly present.
- In the frequency domain it is very simple to determine carrier frequency, modulation frequency, modulation level and modulation distortion from a modulated signal (AM or FM).

The **HANDYSCOPE 2** is equipped with a two channel spectrum analyzer. The two channels can be set independently. The spectrum analyzer takes 1024 samples, of which a spectrum of 512 spectral components is calculated by means of FFT.

The sensitivity of the channels can be set from 25 mV/div to 20 V/div. The frequency range of the spectrum analyzer goes from 0.025 Hz to 100 kHz.

The display of the spectrum analyzer is built of 500 x 256 (wxh) pixels, which corresponds with 10x8 (wxh) divisions. Left and right of the display the units of the 2 channels are displayed. Under the display, the frequency axis is displayed.

---

## The voltmeter

If from the input signals only the size is important and not time information or frequency components, the voltmeter is a suitable instrument to measure with. The two channel voltmeter measures the size of the input signal and displays the values using a large 7 segment display. The two independent channels each have their own display.

The voltmeter can measure the input signal in several ways:

TRUE RMS	the true RMS value is measured
PEAK PEAK	the peak peak value is measured
MEAN	the mean value is measured
MAX	the maximum value is measured
MIN	the minimum value is measured
dBm	the value is given in decibel
POWER	the power of the input signal is determined
CREST	the crest factor is calculated
FREQ.	the frequency of the input signal is measured

The input of the voltmeter is autoranging or manually settable between 100 mV full scale and 80 V full scale.

Besides this, the voltmeter has the possibility to measure at certain times and send the data to a printer or write it on disk.

---

## The transient recorder

For measuring slowly changing signals (e.g. the temperature change in a room) the transient recorder is the most suitable instrument.

The two channel transient recorder measures the input signals at adjustable times. The time between two measurements is adjustable from 0.01 second to 300 seconds. The number of samples is also adjustable from 1 to 30000. The maximum measuring time is  $300 \text{ sec} \times 30000 \text{ samples} = 9000000 \text{ seconds}$  (104.16 days).

The sensitivity of the two channels is adjustable between 25 mV/div and 20 V/div.

The display of the transient recorder is built of  $500 \times 256$  (wxh) pixels, which corresponds with  $10 \times 8$  (wxh) divisions. Left and right of the display the units of the 2 channels are displayed. Under the display, the time axis is displayed. In addition, the value, time and date of the samples are given.

The transient recorder measures in one of the following ways:

MOMENTAL	the momentary value of the input signal is measured
TRUE RMS	the true RMS value of the input signal is measured
MEAN	the mean value of the input signal is measured
MAX	the maximum value of the input signal is measured
MIN	the minimum value of the input signal is measured

---

## The probes


The **HANDYSCOPE 2** is shipped with two probes. These are 1x/10x selectable passive probes. This means that the input signal is passed through directly or 10 times attenuated.

The x10 attenuation is achieved by means of an attenuation network. This attenuation network has to be adjusted to the oscilloscope input circuitry, to guarantee frequency independency. This is called the low frequency compensation. Each time a probe is used on an other channel or an other oscilloscope, the probe must be adjusted.


Therefore the probe is equipped with a setscrew, with which the parallel capacity of the attenuation network can be altered. To adjust the probe, switch the probe to the x10 and attach the probe to a 1 kHz square wave signal. Then adjust the probe for a square front corner on the square wave displayed. See also the following illustration.



correct



undercompensated

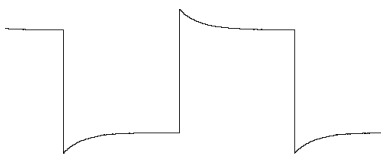

overcompensated

## Chapter 2

# Hardware installation

---

---

The **HANDYSCOPE 2** is an external measuring instrument which can be connected to a PC.

The **HANDYSCOPE 2** is connected to the parallel printer port of the PC using the attached cable.



---

**Note** Do not connect the **HANDYSCOPE 2** to any other port at the PC than the Centronics parallel port. Connecting to other ports may damage your **HANDYSCOPE 2**

---

The **HANDYSCOPE** does not need an external power supply, but is powered by the computer.



---

**Note** Switch, to avoid damage at the **HANDYSCOPE 2** or the computer, before connecting the cable the computer off.

---

If your computer is equipped with one parallel printer port, a conflict may arise when printing waveforms. The **HANDYSCOPE 2** has to be disconnected from the PC and the printer be connected to the PC. Then the print job can be finished. After that the printer has to be disconnected and the **HANDYSCOPE 2** has to be connected to the PC again.



---

**Note** Place, to avoid much switching between printer and **HANDYSCOPE 2**, an extra printer port in your PC.

---



---

### Installation of the software

The software of the **HANDYSCOPE 2** is shipped on one diskette.

First you have to make a backup of the original diskette. Refer to your DOS manual for making a backup of a diskette. When you have made the backup, store the original diskette in a safe place and use the backup.

The software is shipped ready to use, without installation program. You can run the software direct from the diskette or from a hard disk.



---

**Hint** A hard disk is much faster than a diskette and has usually more free space available to store data.

---

To install the software on a hard disk, first make a directory for the software. Then copy all files from the diskette to the directory. The files are:

HS2.EXE	the program
HS2_ENG.HLP	the English help file
HS2_ENG.INF	information for the help file
HS2.FNT	font file for printing output
HS2.DEF	file with program settings

An example, where the diskette is in drive A: and the software has to be installed in a directory called HS2 on the C: drive.

```
C :  
MD HS2  
CD HS2  
COPY A : * . *
```

The software is now installed on the harddisk. After starting the program, the **DEFAULT DIRECTORIES** can be set. These indicate where the program has to store and look for help files, instrument setting files and measurement data files. You can set the **DEFAULT DIRECTORIES** with the menu **SETTINGS**, in the lower right corner of the screen.

---

## Structure of the program

The program contains five integrated measuring instruments:

- 1 An oscilloscope, device: LIVE.
- 2 A storage oscilloscope, device: HOLD.
- 3 A spectrum analyzer, device: SPECTRUM.
- 4 A true RMS voltmeter, device: VOLT.
- 5 A transient recorder, device: TRANS.

Only one measuring instrument can be active at the same time.

From each measuring instrument another measuring instrument can be activated. Standard features of the above five measuring instruments are options to make print outs and to leave the program to return to DOS.

---

## Starting the program

The program can easily be started according to the below-mentioned procedure:

```
HS2 par1 par2
```

If no parameters are given, the device LIVE is selected, with the default settings.

The parameters par1 and par2 have the following meaning:

**par1** Indicates the device that will be activated after starting the program. Valid values are:

- LIVE : Measuring instrument oscilloscope.
- HOLD : Measuring instrument storage oscilloscope.
- SPECTRUM : Measuring instrument spectrum analyzer.
- VOLT : Measuring instrument true RMS voltmeter.
- TRANS : Measuring instrument transient recorder.

**par2** Indicates the filename of the instrument setting (see for writing or reading instrument settings: SETTINGS menu).



Example:

```
HS2 trans b:HS.set
```

means the measuring instrument transient recorder is activated with the file settings b:HS.set. Incorrect instrument or filenames will be ignored.

The parameters par1 and par2 may be exchanged sequentially, but have to be separated by a space.

---

## Controlling the program

After starting the program, first an intro screen with program information is displayed. This screen indicates what kind of display adapter the program has detected and whether a *Microsoft*® compatible mouse is available.

After the intro screen has disappeared, the normal working screen appears. This screen is divided in two parts: a part for displaying the measurement data and a part for the main menu, for controlling the program. The program can be controlled by the keyboard as well as by a mouse.

---

### Controlling by mouse

When using the mouse, the left mouse button is used for <Enter> and the right mouse button is used for <Esc>.

---

### Controlling the main menu

Each instrument has its own main menu, in the lower part of the screen. The menu is built of three rows of 6 columns.

One of the buttons of the menu is always displayed inverted. That is the cursor, indicating the selected choice. For controlling the main menu, the following keys are available:



places the cursor one row up



places the cursor one row down



places the cursor one column to the left



places the cursor one column to the right



activates the selected choice



displays a list of instruments

Depending on the choice, after activating, a popup menu appears or the text in the menu changes, as well as the instrument setting.

---

## Controlling popup menus

Various settings in the software are made by means of popup menus. For controlling the popup menus the following keys are valid:



Move the cursor up



Move the cursor down



Move the cursor to the top of the menu



Move the cursor to the bottom of the menu



Move the popup menu to the right



Move the popup menu to the left



Move the popup menu up



Move the popup menu down



Accept the selected choice



Leave the popup menu without changes

Space

Leave the popup menu without changes

Character

Place the cursor at the choice beginning with that character

When a popup menu has been moved by means of the <←→↑↓> keys in combination with the <Shift> key, the new position of the menu will be saved in the file HS2.DEF.

---

## Help screens

The program contains integrated help screens. The screens can be invoked at several places in the program, by pressing function key <F1>. The invoked help screen gives information about controlling the active program part or information about the active program part.

---

## Program settings

Several parts of the program are configurable. To do that, activate the choice **SETTINGS** from the main menu. A popup menu will appear.

The contents are partly dependent on the type of graphics card in your PC. If an EGA or VGA card is available, two choices for setting the screen colors and the monitor type are present. If no EGA or VGA card is detected, those two choices will not be present.

Settings concerning the program itself (and not the measuring instruments of the program) are saved immediately in the file HS2.DEF, which is read at the start of the program.

---

## Setting the main menu type

By using the choice SIMPLE MENU a more simple main menu containing 8 choices is selected. The simple menu has the following choices:

MEASUREMENT TYPE	With this a saved instrument setting can be read
START/STOP MEASUREMENT	Stop or start the measurements
REFERENCE	Show or don't show a reference signal. The reference signal can be read using <b>READ MEASUREMENT</b>
WIPE SCREEN	The signal display is cleared
SAVE MEASUREMENT	The last measured waveform, together with the instrument settings
PRINT MEASUREMENT	The last measured data is printed

## MISCELLANEOUS

Through this choice, three choices are available:

ADVANCED MENU to return to the normal main menu

SAVE SETTINGS to save the current instrument settings to disk

QUIT PROGRAM to quit the program

---

## Saving instrument settings

If you often use the same settings for an instrument, you can save the setup on disk. By loading the file with the setup, you can set your instrument very easy. The setups for all five instruments are saved.

To save an instrument setup, first you have to set the instrument completely. After the instrument is set, you can save the setup.

With **TEXT FOR SETTINGS** a dialog box appears, in which three lines of explanatory text for the setup to be saved can be entered. You can enter e.g. for what type of measurements this setup is to be used.



After the text is entered, the dialog box is closed with <Esc>

The popup menu **SETTINGS** will become active again. Choose from the menu the choice **COMMENT FOR SETTINGS**. A dialog box appears.



In this dialog box a name for the setup can be entered. The maximum length for the name is 25 characters. This name is used for selecting the correct saved setup, when loading a setup. After the name is entered, the

box can be closed by pressing <Esc>.

Then activate the choice **SAVE** from the SETTINGS menu. A dialog box appears, in which the filename for the settings file can be entered. The filename will automatically get an extension .SET. If you have entered the filename, the file with the instrument setup is saved on disk.

To make an instrument setting which will be used as a 'quit program' from SELECT SETTINGS (menu SETTINGS from the advance main menu) or MEASUREMENT TYPE (simple menu) any instrument setup will do, but the filename for the settings has to be QUIT. If a file named QUIT is read by one of the two here mentioned menus, the program will quit. Reading that file using RESTORE will not quit the program.

---

## Loading instruments settings

Saved instrument settings can be read in three ways: at the start of the program as a parameter, through the choice **RESTORE** from the SETTINGS menu and through the choice **SELECT SETTINGS** from the SETTINGS menu. The first method is already mentioned on page 23.

After activating the choice RESTORE a popup menu with a list of the present settings files appears. By means of the <←→↑↓> keys the file to be loaded can be selected. By pressing <Enter> the selection is accepted. Before loading an extra confirmation is requested. The selection can be cancelled by pressing <Esc>.

After activating the choice **SELECT SETTINGS** both a popup menu and a text window appear. In the popup menu the names of the settings, entered with the choice COMMENT FOR SETTINGS, are listed. In the text window, the accompanying text, entered with TEXT FOR SETTINGS, is shown.

---

## Setting the file type for measurement data

With the choice **SET DATAFILE TYPE** the file type with which the data will be stored on disk can be set. When the **BYTE** option is selected the data file exists of records of 4 bytes (byte 1 and 2 are the value of CH1 and byte 3 and 4 are the value of CH2).

When the **ASCII** option is selected the data file exists of an ascii file of 4 columns, separated by a comma. Column 1 is the sample number, column 2 the sampling time, column 3 the voltage value of CH1 and column 4 is the voltage value of CH2.

---

## Setting the location of files

With the choice **DEFAULT DIRECTORY** the default directories for the **HANDYSCOPE 2**, the print files and the data files can be set. The default directory for the **HANDYSCOPE 2** is the directory containing the files HS2.EXE, HS2\_ENG.HLP, HS2\_ENG.INF and HS2.FNT.

---

## Setting the printer port

With the choice **DEFAULT PRINTER PORT** the parallel printer ports 1, 2 or 3 to be connected to the printer can be selected.



---

**Note** Printer port 1 has the I/O address \$3BC, printer port 2 has the I/O address \$378 and printer port 3 has the I/O address \$278.

---

When only one printer port is available, a conflict arises when a print command is given. In that case the program asks you to disconnect the **HANDYSCOPE 2** from the computer and to connect the printer to the computer. Then the printout is generated. When printing is finished, you are requested to disconnect the printer and to connect the **HANDYSCOPE 2** to the computer again. The **HANDYSCOPE 2** is then ready to measure again.



---

**Hint** to avoid connecting and disconnecting the **HANDYSCOPE 2** and the printer often, place a second printer port in your PC

---

---

## Setting the printer type

With the **SET PRINTER TYPE** choice you can choose between an **EPSON** compatible matrix printer or an **HP-LASER** compatible printer. This setting is used for printing out data.

---

## Setting the date format

The program uses date indications at several places, like at printer output or on the screen of the transient recorder. There are two ways to represent the date: day-month-year (DD-MM-YY) and month-day-year (MM-DD-YY). The preferable notation can be selected by activating **DATE FORMAT** from the SETTINGS MENU. Behind DATE FORMAT the current setting is indicated.

---

## Default text on the printer output

With **SET USER TEXT** you can fill in three text lines. These text lines are placed at the top on each print out (with the PRINT option). For example, you can fill in your name and address information in these text lines.

The text lines are saved in the HS2.DEF file. At the start of the program the text lines are read automatically.

---

## Setting the screen colors

When an EGA/VGA color monitor is available, the colors of the background, the foreground, CH1, CH2 and the cross hair can be set. While changing, the new color is displayed immediately. The color brightness can be changed using the <←→> keys or the mouse.

Also a selection can be made between a color or a black and white display.

---

## Storing measurement data on disk

By activating the **WRITE DISK** choice a file name is requested. A file name without extension has to be entered. The data are stored in filename.DAT and the corresponding instrument setting in filename.GEG.

In case the file name already exists, the program asks to overwrite the existing file. If there is insufficient disk space an error message appears. A file with the extension "DAT" and a file with the extension "GEG" are made during a WRITE DISK. The data format is determined by SET FILE TYPE.



---

**Note** The voltmeter has a completely different way of storing measurement data. This will be described in the chapter Voltmeter. The transient recorder always stores data on disk, so the choice WRITE DISK is not available.







---

---

## Loading saved measurement data

By activating the choice **READ DISK** a popup menu appears, giving an overview of the data files contained in the indicated default data directory. With the <←↑↓→> keys a file can be selected. When a selection has been made, the data and set files will be read from disk. When the data is not from the measuring instrument only the data file is read, or an error message appears.

The following file operations can be carried out with the function keys:

-  View the file information (size, date and time)
-  View the file (only text files)
-  Delete the file
-  Rename the file
-  Copy the file
-  Enter a new directory mask and/or path and/or disk

When <F4>, <F5> or <F6> is used, both the .DAT file and the .GEG file are acted on.

---

## Printing measured data

There are two ways to print the measurement data.

The first way is pressing <Shift-PrtSc>. A quarter page size screen dump is made, containing only the information that is found on the display.



The second way is activated by the menu choice **PRINT**. A popup menu appears, displaying 2 choices.

The **DISK** choice requests for a file name to create the print file. This print file can be sent to the printer using the DOS command: **COPY/B filename PRN**, where *filename* stands for the file name you entered in the input box.

With the **PRINTER** option the screen can be printed out on an EPSON, HP-LASER or a compatible printer. What printer type has been installed is indicated at the bottom of the popup menu. This printout is full page, containing extra information like date and time of the measurement, the comment lines and the USER TEXT.

Comments can be added to the printout using the **COMMENT** choice. When activated, a dialog box appears, in which three lines of text can be entered. These comments entered here are printed together with a printout. The comments are stored on disk together with the data. So each data file has its own comments. The key **<F1>** gives an overview of valid function keys in the editor.

---

## Choosing an instrument

By activating the choice **DEVICE**, menu a popup menu appears, displaying 6 choices.

When the **QUIT** choice is activated, the program will be terminated. The other options activate the indicated measuring instrument.

The measuring instruments (the devices) to be selected are:

<b>LIVE</b>	=	oscilloscope
<b>HOLD</b>	=	storage oscilloscope
<b>SPECTRUM</b>	=	spectrum analyzer
<b>VOLT</b>	=	voltmeter
<b>TRANS</b>	=	transient recorder

This menu can also be activated by means of the **<Esc>** key or the right mouse button (if no other menu is active).

---

## Terminating the program

The popup menu **DEVICE** can be invoked from all program sections by means of the <**Esc**> key or the right mouse button. The **QUIT** option enables you to leave the program and takes you back to the operating system (DOS). The popup menu **DEVICE** can also be invoked with the <**Esc**> key or the right mouse button, if no other menu is active.

## Chapter 4

# Oscilloscope (device: LIVE)

---

---

An oscilloscope is a measuring instrument which displays the changes of a voltage in the time domain.


The **HANDYSCOPE 2** is equipped with an oscilloscope with 2 inputs (channels), of which the sensitivity of each channel is adjusted separately. It is a digital sampling oscilloscope. That means that the oscilloscope takes samples at fixed times. From each sample the value is determined and the size is displayed at the screen. The screen is filled with 500 samples per channel. Between two adjacent samples on the screen a line is drawn. The speed at which the samples are taken, is adjustable.

---

## Aliasing

A disadvantage of digital sampling oscilloscopes is the fact that aliasing can occur.

Aliasing occurs when too low and therefore a wrong sampling speed is chosen. In the next illustration is shown how aliasing occurs.

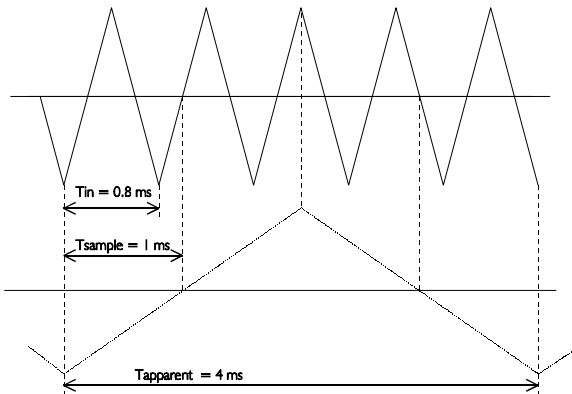

The input signal is a triangular signal with a frequency of 1.25 kHz (upper most in the illustration). The signal is sampled at a frequency of 1 kHz. The dotted signal is the result of the reconstruction. From that triangular signal the periodical time is 4 ms, which corresponds with an apparent frequency (alias) of 250 Hz (1.25 kHz - 1 kHz).

To avoid aliasing, the sample frequency must be greater than 2 times the maximum frequency of the input signal.

If you have any doubts about the displayed signal, you can set the timebase of the oscilloscope one step faster or slower and check whether the signal at the display changes accordingly. If that does not give any clearance, you can determine the frequency of the input signal with the spectrum analyzer. Therefore you must set the frequency range of the spectrum analyzer to the maximum, to avoid aliasing with the spectrum analyzer. For more information, see the chapter Spectrum Analyzer

---

## Displaying channels

The **HANDYSCOPE 2** has several modes to display the two channels. The mode can be set by activating the choice **MODE** from the main menu.

By activating MODE a popup menu appears with 6 or 7 options:

CH1	Only CH1 is measured and displayed
CH2	Only CH2 is measured and displayed
CH1 AND CH2	CH1 and 2 are measured and displayed simultaneously
ADD	CH1 and 2 are measured simultaneously and added. Only the sum is displayed
COMPARE	CH1 is measured and displayed. The latest measured signal at CH2 is displayed, to compare it with CH1.
XY-PLOT	This is a special display mode. CH1 and CH2 are measured. CH1 is displayed at the x-axis and CH2 at the y-axis of the screen.

---

## Setting up a channel

The two channels of the **HANDYSCOPE 2** oscilloscope are completely configurable. Both channels are identical, each has its own menu in the main menu. Since the possibilities for both channels are equal, only CH1 is explained here. Where CH1 is described, the same applies to CH2.

With the choice **CH1 SET** (or **CH2 SET**) from the main menu a popup menu is called.

With the choices from this menu CH1 can be configured.

---

### Setting the sensitivity of a channel

By activating the choice **VOLTS/DIV** a popup menu appears, displaying 10 voltage ranges.

When e.g. **2** has been activated, a voltage range of 2 volts/div will be set, that is, the maximum voltage to be measured is  $\pm 8$  volt. The **AUTO** option provides for setting the voltage-axis automatically.

The following ranges can be selected: 25 mV, 50 mV, 100 mV, 200 mV, 500 mV, 1V, 2 V, 5 V, 10 V and 20 V per division

---

### Setting the signal coupling

By activating the choice **COUPLING AC/DC**, the text changes from **COUPLING AC** to **COUPLING DC** or vice versa. In the hardware, a capacitor is switched into (AC) or out of (DC) the signal path.

In **COUPLING DC** the complete signal (AC+DC) at the input is passed through. In **COUPLING AC** only the AC component of the input signal is passed through. It is then possible to examine e.g. a  $\pm 20$  mV ripple on a 30 V DC voltage, since only the ripple is passed through and the DC voltage not. AC voltages with a frequency lower than  $\pm 4$  Hz are not coupled correctly.

The current coupling is displayed in the upper part of the vertical axis. For DC the sign **=** is used and for AC the sign **~**.


---

## Setting the vertical position of a channel

The vertical position of a channel on the screen can be adjusted.

When doing this, the signal is shifted graphically, **after** sampling. This method only has an effect on the displayed signal. If the signal clipped, because it is larger than the selected input range, and is positioned with the software method, the signal remains clipped, but the clipping is now visible on the display. The signal appears to be 'cut off' at either the upper side or the lower side. This positioning method is used for placing two overlapping signals away from each other.

The positioning method is not done by means of a popup menu. At the lefthand side of the screen (2 channels and X-Y for CH2 at the righthand side) two small arrows are visible. The small arrow next to the border of the window is for the position of a channel, the outer arrow is for the trigger level, which is discussed later.

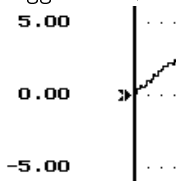

There are two or four arrows, depending on whether one or two channels are displayed. Only one offset (arrow) can be active, displayed normally. All other arrows are displayed inverted. In the above illustration the channel offset arrow for CH 1 is active.

The arrow indicates the offset, the 0 volt level. The offset can be set as follows:



---

**Note** To change the offset, first remove all popup menus

---

SHIFT	↑	Move the offset level up
SHIFT	↓	Move the offset level down
SHIFT	home	Move the offset level to the center
SHIFT	→	Select the next offset or trigger level
SHIFT	←	Select the previous offset or trigger level
SHIFT	page up	Move the offset level to the top
SHIFT	page down	Move the offset level to the bottom
SHIFT	+	Increase the step size (2 times)
SHIFT	-	Decrease the step size (2 times)




---

**Note** the step size for changing the offset level or trigger level can be changed with <Shift-+> and <Shift-—>

---

The offset level can also be changed with the mouse. Place the mouse cursor on top of the arrow of the offset level to be changed and drag it to the correct position. Drag: press the left mouse button and keep it pressed, while moving the mouse. When the arrow is at the correct position, release the mouse button. The mouse cursor will disappear while dragging the arrow and appear again when the button is released.

---

## Enlarging or reducing the vertical axis

The measured values can be enlarged or reduced by software. Because of that it is possible to magnify the vertical axis. It is also possible to invert the measured values. After activation of the choice **GAIN** in the menu CH1 SET, a dialog box appears in which a multiplication factor can be entered. The factor must be between -8 .. -0.1 or 0.1 .. 8. The measured factors are multiplied by the factors and then displayed. The numbers along the vertical axis are also changed.

The GAIN can be used to invert a signal. Suppose you are measuring two signals and wish to subtract the signal on CH1 from the signal on CH2. To do that you have to set the GAIN for CH1 to -1 and the gain for CH2 to +1. By selecting a measuring mode ADD (CH2 - CH1) is displayed.



---

**Note** By choosing a gain of -1, two signals can be subtracted from each other.

---

An other possibility is displaying two signals of a different size at the same size, to simplify comparison. Suppose you have a 5 volt square wave signal on CH1 and a 4 volt square wave signal on CH2. For displaying both signals at the same size, set the gain for CH1 to 0.8 and for CH2 to 1. Both signals are displayed then at the same size.

---

## Changing the units of the vertical axis

Along the vertical axis, normally the voltage of the input signal is projected. The unit of measure is then Volt and the numbers along the axis correspond with the size of the input signal.

The **HANDYSCOPE 2** oscilloscope allows you to create another definition of the vertical axis.

By means of the choice **UNIT** from the CH1 SET menu the units of measure of the vertical axis can be changed.

After activation, a popup menu with 11 choices appears. The unit that is selected, is displayed at the top of the vertical axis. It is also placed on the paper when printed out. The possible choices are: VOLT, AMPERE, DEGREE F, DEGREE C, WATT, PERCENT, METER, KILOGRAM, NEWTON, COLOMB and BAR.

If you are measuring e.g. with a temperature probe, you can choose **DEGREE C** for the units.

By activating the choice **UNITS/VOLT** from the menu CH1 SET, a multiplication factor can be entered for the units of the vertical axis. A dialog box appears in which the factor is entered. The numbers along the vertical axis are multiplied by the factor and replaced by the result.

If you are using a 10x probe, you can by means of UNITS/VOLT enter the value 10, to get correct numbers along the vertical axis.



Another application is the previously mentioned example with the temperature probe. Suppose the temperature probe gives a voltage change of 1 volt at a temperature change of 5 degrees. By entering the factor 5, the temperature change is displayed directly in the number of degrees.

It is also possible to add an offset to the numbers of the vertical axis. In the dialog box called by activating **OFFSET** from the CH1 SET menu, an offset can be entered. This offset is added to **the numbers along the vertical axis**. Nothing is done to the signal.

An application for this is again the temperature measurement. Suppose the output voltage of the temperature probe at 0°C is +10 Volt. By entering a UNITS/OFFSET of -10, the zero level of the axis is changed in a way that the absolute temperature is directly readable.

---

## Setting up the time axis

Along the horizontal axis of the screen the measuring time is projected. The oscilloscope always measures 2 pages of samples. Default the page after the trigger point is displayed (post trigger). Switching between the 2 pages is done by pressing <PgUp> or <PgDn>. <PgUp> gives the post trigger page and <PgDn> gives the pre trigger page. The keys <+> and <-> can be used to adjust the step size.

---

## Setting the timebase

By activating the choice **TIME/DIV**, a popup menu appears, displaying 12 time ranges.

When, for example, the **0.2 sec** choice has been activated, one time division will be equal to 0.2 sec. The screen contains 10 time divisions.

One time division consists of 50 samples. The screen contains  $10 \cdot 50 = 500$  sample values. By activating the **0.2 sec** choice one sample is taken every  $0.2/50 = 4$  msec.

With the **0.2 sec** choice the minimum duration of the sampling process is  $10 \cdot 0.2 \text{ sec} = 2.0 \text{ sec}$ . When a key is pressed within these 2.0 sec, the sampling process will be interrupted and the program will respond to the key press.

The following time-axis ranges can be selected: 0.25 msec, 0.5 msec, 1 msec, 2 msec, 5 msec, 10 msec, 20 msec, 50 msec, 0.1 sec, 0.2 sec, 0.5 sec, 1 sec, 2 sec, 5 sec and 10 sec/div.

---

## Magnification of the horizontal axis

By activating the **TIME-MAG** choice, a popup menu appears, displaying 6 software time-axis magnification areas.


When, for example, the **2\*** choice has been activated, the time-axis will be magnified 2 times. The magnified part of the screen is indicated by two interconnected arrows at the bottom of the screen. The time-axis magnification area can be moved using the **<PgUp>** and **<PgDn>** keys or by mouse. Place the mouse cursor on the interconnected arrows, press the left mouse button and drag the arrows left or right. With the **<+>** and **<->** keys the step size can be increased and decreased, respectively.

The following time-axis magnification areas can be selected: 1, 2, 4, 5, 10 and 20 times.

---

## Triggering

To be able to examine a signal, the moment of displaying the signal has to be adjustable. Therefore an oscilloscope is equipped with a triggering system. This functions as follows:

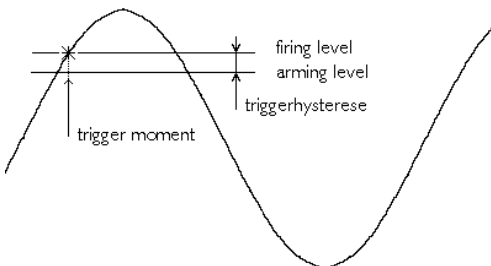

The input signal is compared with two levels in the trigger circuitry: the arming level and the firing level. When the input signal passes the arming level, the trigger system is armed. If the the input signal passes the firing

level, the trigger system becomes active and 'fires' a pulse. This pulse is used to start the display of the signal.

The arming level and the firing level are coupled to each other by the trigger hysteresis and their level is determined by the trigger level. The firing level corresponds to the trigger level. The trigger hysteresis defines at which signal size change can be triggered, the change has to be that large that both levels are passed. With a small trigger hysteresis it is possible to trigger on small signals. If a signal contains a lot of noise, a small trigger hysteresis causes triggering on the noise, instead of the original signal, which gives an unstable display. A trigger hysteresis larger than the noise level is then necessary.

In the latter illustration a signal and the two levels are displayed. In this case it is triggered on the rising slope of the signal. The signal passes the two levels from low to high. When triggering on the falling slope of a signal, the two levels are swapped. Then the signal has to pass the two levels from high to low, to generate a trigger.

---

## Selecting the trigger source

By activating the **TRIG CH1 / TRIG CH2** choice, the text in the menu changes from TRIG CH1 to TRIG CH2 or vice versa.

In the TRIG CH1 position triggering takes place on CH1 and in the TRIG CH2 position on CH2.

---

## Setting the trigger hysteresis

By activating the choice **HYSTERESIS**, a popup menu appears, displaying 12 trigger hysteresis options.

For example, when the **0.5 DIV** option has been activated, the trigger hysteresis will be 0.5 division of the voltage range set. This means that the signal has to come out at a minimum of 0.5 division below the trigger level set (for a positive trigger slope). When the signal has much noise the trigger hysteresis can be set high to ensure that triggering is satisfactory.

When a signal has less noise, the trigger hysteresis can be set low allowing triggering at low signal levels. For setting the trigger level, see: offset and trigger levels.

The following trigger hysteresises can be selected: 0, 0.125, 0.25, 0.5,

0.75, 1.0, 1.25, 1.5, 1.75, 2.0, 2.25 and 2.5 DIV.

---

## Setting the trigger slope

By activating the choice **SLOPE+** / **SLOPE-**, the text in the menu choice changes from SLOPE+ to SLOPE- or vice versa.

In the SLOPE+ position triggering takes place on a rising slope of the signal to be measured and in the SLOPE- position on a falling slope.

---

## Adjusting the trigger level

The adjustment of the trigger level is not done by means of a popup menu. At the lefthand side of the screen (two channels and X-Y for CH2 at the righthand side) two small arrows are visible. The small arrow next to the border of the window is for the position of a channel, the outer arrow is for the trigger level.

There are two or four arrows, depending on whether one or two channels are displayed. Only one arrow can be active, displayed normally. All other arrows are displayed inverted. The arrow indicates the trigger level. The trigger level can be set as follows:

SHIFT	↑	Move the trigger level up
SHIFT	↓	Move the trigger level down
SHIFT	home	Move the trigger level to the center
SHIFT	→	Select the next offset or trigger level
SHIFT	←	Select the previous offset or trigger level
SHIFT	page up	Move the trigger level to the top
SHIFT	page down	Move the trigger level to the bottom
SHIFT	+	Increase the step size (2 times)
SHIFT	-	Decrease the step size (2 times)



---

**Note** the step size for changing the offset level or trigger level can be changed with **<Shift-+>** and **<Shift-→>**

---

The trigger level can also be changed with the mouse. Place the mouse cursor on top of the arrow of the trigger level to be changed and drag it to the correct position. Drag; press the left mouse button and keep it pressed, while moving the mouse. When the arrow is at the correct position, release the mouse button. The mouse cursor will disappear while dragging the arrow and appear again when the button is released.

---

## Setting the trigger time-out

When the input signal does not meet the trigger conditions, no new measurement data will be displayed and the last displayed signal will remain on the screen. This can be very inconvenient with unknown signals, since it is not known how the trigger circuitry has to be set. To provide in that case for a representation of the input signal on the screen, a trigger time-out setting is available.

With the time-out setting it is determined how long the delay will be for a trigger pulse. If that time expires, the available data will be displayed. This will not result in a stable display, but it will give an impression how the trigger has to be set.

By activating the choice **TIME-OUT** from the main menu, a popup menu appears with 12 choices for the trigger time-out: 0 DIV, 10 DIV, 20 DIV, 50 DIV, 100 DIV, 200 DIV, 500 DIV, 1000 DIV, 2000 DIV, 5000 DIV, 10000 DIV and Infinite.

For example, when the **50 DIV** option has been activated, the signal will be controlled for 50 time divisions maximally. If the signal does not comply with the trigger level set, the trigger slope and the trigger hysteresis within 50 time divisions, it will nevertheless be measured after 50 time divisions.

---

## Stopping the display

By activating the **LIVE/FREEZE** choice, the text in the menu changes from LIVE to FREEZE or vice versa.

In the LIVE position the oscilloscope continuously takes 500 samples and displays them on the screen.

In the FREEZE position no samples are taken and the samples last taken are displayed on the screen. A ONE SHOT menu is added in the FREEZE position.

By activating the **ONE SHOT** menu the text in the menu changes from ONE SHOT to **MEASURE**. After measuring the signal the text changes back to ONE SHOT. When a key is pressed during measuring (MEASURE), the sampling process will be terminated immediately. Samples taken up to the moment the key is pressed can be viewed (the remaining samples are 0).

---

## Magnifying a part of the screen

By activating the choice **ZOOM**, a popup menu appears, displaying 2 options.

The **FULL** choice displays the signal fully. (The x-axis and y-axis magnifications are set at 1 and the offset levels at 0.)



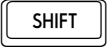

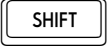

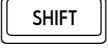

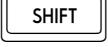

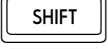

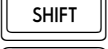

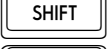

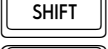

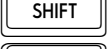



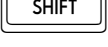

With the **WINDOW** option a rectangular magnification area can be indicated using the <←↑↓→> keys or the mouse. One corner has to be indicated first, followed by the <Enter> key or the left mouse button.

Then the second corner has to be indicated, followed by the <Enter> key or the left mouse button. Cancelling the zooming can always be done by means of the <Esc> key or the right mouse button.

---

## Measuring with the cross hair

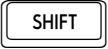After the measured signal is displayed, a crosshair appears. With the crosshair absolute and relative time and voltage measurements can be performed. Controlling the crosshair is done with the following keys:

		Setting the absolute zero
		Setting the relative zero
		Move the crosshair to zero
		Move the crosshair up
		Move the crosshair down
		Move the crosshair to the left
		Move the crosshair to the right
		Mirror the crosshair on the relative x-axis
		Mirror the crosshair on the relative y-axis
		Decrease the step size twice
		Increase the step size twice
		Switching between crosshair controll and offset/ trigger level controll.

Absolute zero is that point at the screen where voltage and time are zero (left most, in the center of the screen). Relative zero is that point set by moving the crosshair to the intended point and subsequently pressing **<Shift-Del>**.

The time and voltage values according the crosshair position are displayed on the screen, the voltage value in the upper right corner of the screen and the time value at the right most end of the time axis. The values are displayed inverted.

The crosshair can also be moved by means of the mouse. This is done by placing the mouse cursor at the crosshair, press the left mouse button and move the mouse, keeping the left mouse button pressed. While positioning the crosshair with the mouse, the mouse cursor disappears. When the correct position is achieved, the left mouse button can be released and the mouse cursor appears again.





---

## Differences with the oscilloscope

The storage oscilloscope HOLD is quite similar to the oscilloscope LIVE, there are a few differences, which will be described here. For the rest is referred to the chapter Oscilloscope (LIVE).

- The HOLD scope only works in ONE SHOT mode and does not measure 2 but 30 pages of 500 samples. With the <PgUp> and <PgDn> keys, the pages are selected. The step size can be set using the <+> or <-> keys.
- The HOLD scope does not provide for XY-PLOT
- The HOLD scope can store data on disk while measuring.

The main menu of the HOLD device differs slightly from the main menu of the LIVE device. At the position where in the LIVE device the LIVE / FREEZE choice is found, the HOLD device has a choice ONE SHOT.

---

## Automatic storage of measurement data

The storage oscilloscope can store measurement data automatically on disk. This is set by activating the choice **NO DISK** from the main menu. The text changes from NO DISK to **AUTO DISK**. As soon as a measurement is started using ONE SHOT, entering a filename for the data is requested.



For the name, 5 characters are accepted, the rest is ignored. The software adds three characters for a file serial number. When the name is entered, measuring can start. There is a delay until the input signal meets the trigger conditions. When the trigger conditions have been met and a

signal is measured, the data is written on disk. This is indicated by a text window, in the lower left corner of the screen.

When the data (measurement data, time and date of measuring) are written, the storage oscilloscope will wait for the next signal to meet the trigger conditions. If that occurs, new samples are taken and stored on disk in a new file. The file serial number will be increased by one from the previous number. The measuring and storing of data can be stopped by pressing <Esc>. **READ DISK** is used to load stored data for examination.

This system is very usefull when e.g an interference glitch has to be measured. Suppose at unpredictable times a glitch occurs. By setting the trigger delay to INFINITE and selecting AUTO DISK, the storage oscilloscope may wait days for the glitch, but when it occurs, it is measured and stored. The time and date of the occurrence are stored and appear on a printout.



---

**Note** When the sensitivity of a channel is set to AUTO ranging, the oscilloscope uses 1 to 10 measurements, depending on the input signal, to find a suitable sensitivity.


---

The (storage)oscilloscope measures and displays signals in the time domain: the voltage is plotted against the time. It is also possible to display measurement data in the frequency domain, the data is then plotted against the frequency. For this method the spectrum analyzer is used.

---

### Description of FFT

The spectrum analyzer is using the Fast Fourier Transform (FFT) principle. For this transform, 1024 samples are taken with a previously set sample speed. With these 1024 samples, here called FFT-block, the spectrum is calculated. Therefore the FFT places an infinite number of FFT-blocks behind each other, in the positive and negative direction. Each FFT-block forms 1 period of the created periodic signal.

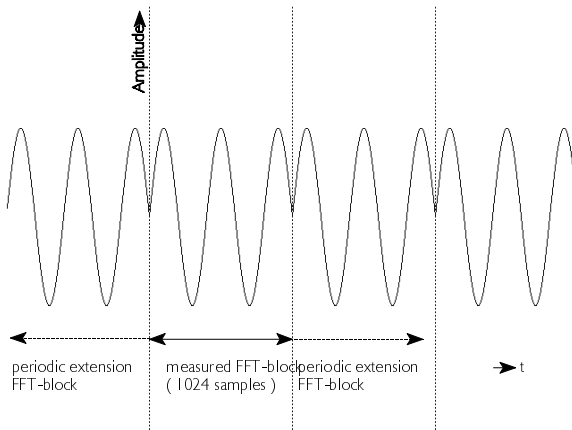


From the signal obtained like this, the spectrum is calculated. The FFT calculation results in 512 spectral components. These spectral components together form the frequency spectrum of the input signal. 500 of the 512 spectral components are displayed, in 12 divisions of 40 spectral components each.

The **HANDYSCOPE 2** spectrum analyzer displays an amplitude spectrum, which means that a 2 volt peak-peak sine wave is displayed with a 1 volt spectral component.

---

## Aliasing

Like the oscilloscope, the spectrum analyzer needs a high enough sampling frequency to avoid aliasing. The result of aliasing when using FFT is that the frequency curve is folded back on itself. See also the next illustration.

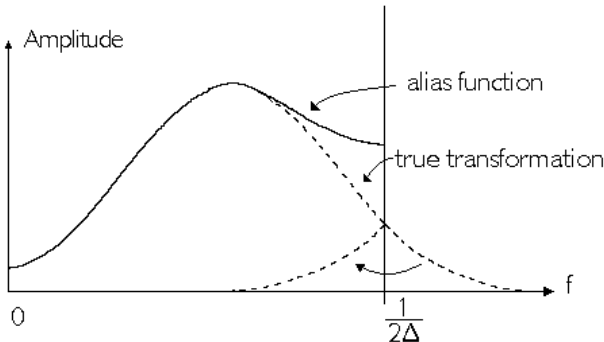


The original signal is sampled at a sample time  $\Delta$ . The critical frequency (Nyquist frequency) is  $(1/2\Delta)$  Hz.

---


## Windowing

FFT treats the FFT-block of 1024 samples like it is one period of a periodic signal. If the sampled signal is not periodic, harmonic distortion can arise, since the periodic waveform, 'created by the FFT', can have sharp discontinuities. See also the following illustration. These discontinuities are also called calculation errors.

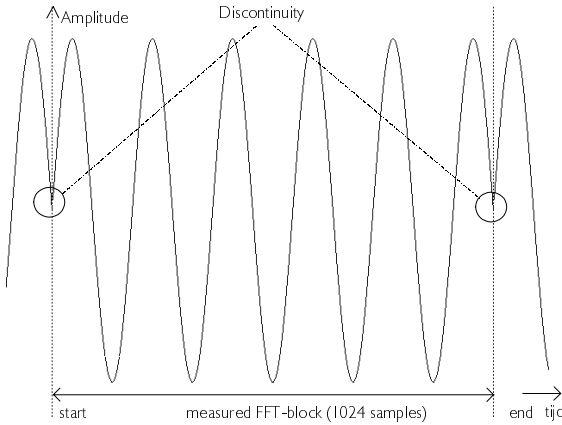

This means that because of the calculation errors extra frequency components are generated around the true frequency. Because of this 'smearing' the amplitude of the true frequency decreases, since the area under the curve remains the same.


The smearing, caused by the calculation errors, can be decreased by placing a window on the FFT-block of 1024 samples, in such a way that the ends of the FFT-block are smoothly tapered to zero and discontinuities do not occur when the FFT treats the windowed block as one period of a periodic signal. Each sample of the FFT-block is therefore multiplied by a factor, whose size is dependent on the position of the sample in the FFT-block. See also the following illustration.

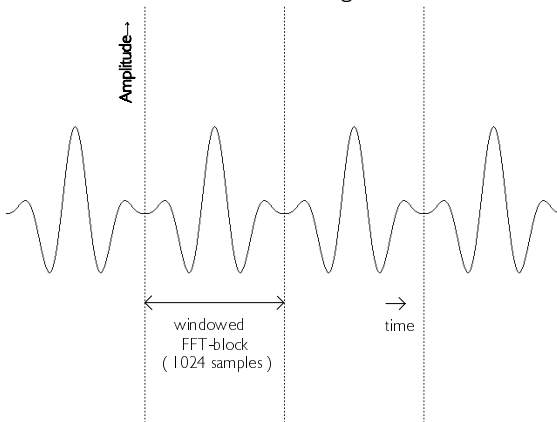


The software supports five different windows:

- rectangular (all data remains the same)
- Hanning
- Hamming
- Blackman
- Bartlett


A graphical representation of the different windows is given in the next illustration.

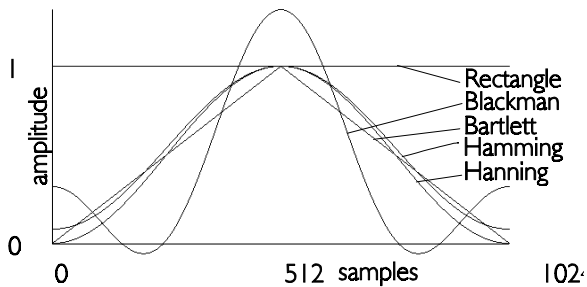


The effects of the different windows are displayed next, together with the sinewave signal the spectrum is taken from. The sinewave does not fit in the FFT-block and will therefore cause calculation errors.

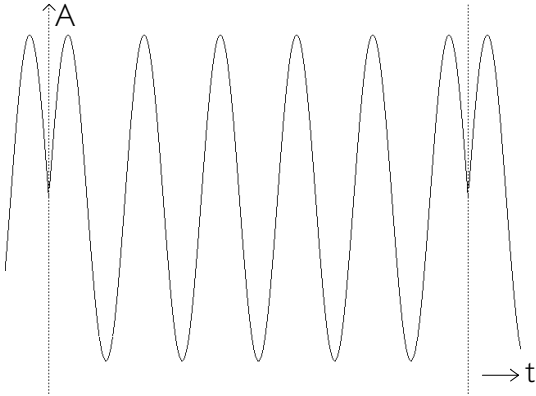


The measured sine wave

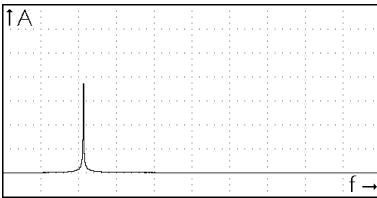


Rectangular window

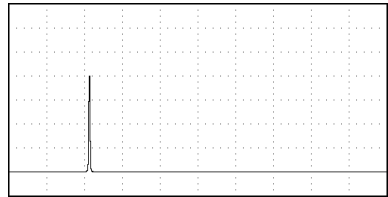


Hanning window

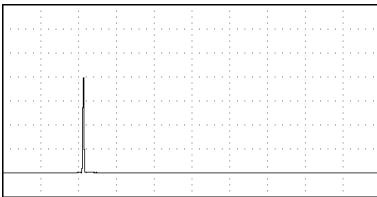

Hamming window

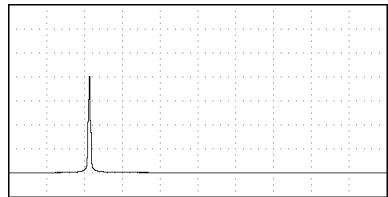


Blackman window

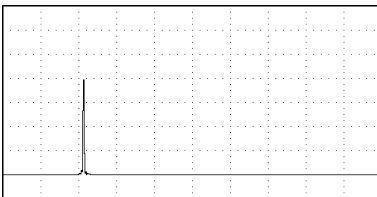


Bartlett window

When using the rectangular window, the amplitude of the spectrum is lower than with the other windows. Smearing is larger with the rectangular window.


Again some example illustrations, now with a sine wave exactly fitting in the FFT-block.

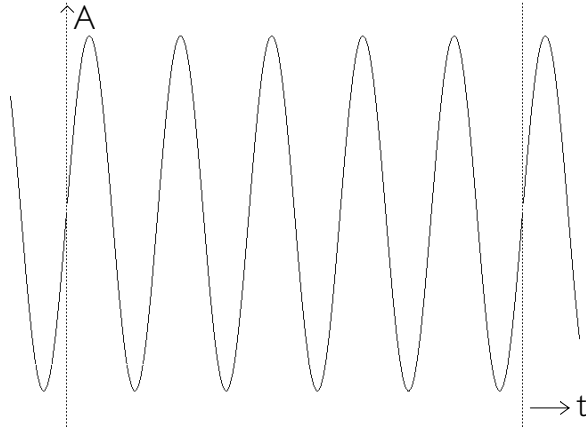


The measured sine wave

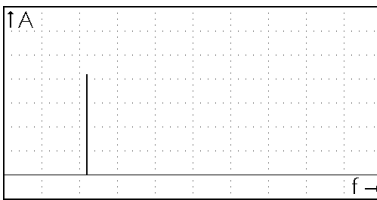


Rectangular window

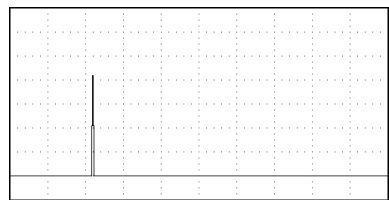


Hanning window

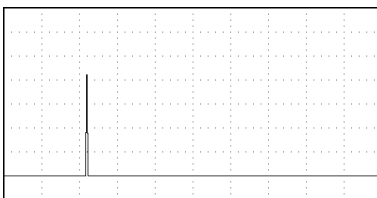

Hamming window

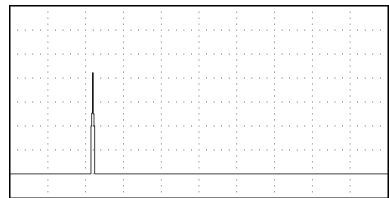

Blackman window

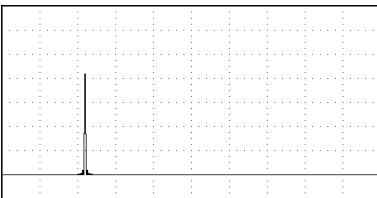

Bartlett window



---

## Similarities with the oscilloscope

The spectrum analyzer has some similarities with the oscilloscope. The bottom row in the main menu contains choices that are similar to the ones in the oscilloscope devices. They will not be discussed here.

---

## Displaying channels

The spectrum analyzer has several ways to display the two channels. By activating **MODE** from the main menu, a popup menu containing five choices appears. The spectrum analyzer does not have the display option X-Y PLOT. The other choices are equal to the choices for the oscilloscope. See the chapter Oscilloscope for an explanation of the possibilities.

---

## Setting up a channel

The two channels of the spectrum analyzer can be set up to your own demands. For both channels equal settings are available, each through their own choice in the main menu. The available settings are equal to the settings for the oscilloscope channels, except for a few points. These points will be discussed here, the other points will be referred to the chapter about the oscilloscope. All that is discussed here, is valid for both channels.

Activating the choice **CH1 SET** from the main menu, gives a popup menu which is almost equal to that of the oscilloscope, except for the last line. The oscilloscope provides for a choice **UNIT**, the spectrum analyzer for a choice **LINEAR/dB**.

---

## Setting the sensitivity

The sensitivity of a channel can be set in exactly the same way as with the oscilloscope. It can be done by means of the choice **VOLTS/DIV**.

---

## Adapting the vertical axis

With the spectrum analyzer you can decide whether the vertical axis will be linear or logarithmic. This is done with the setting **LINEAR** or **dB** from the menu CH1 SET. The current setting is displayed by the text of the choice. Activating the choice will make the text and setting change.

On a logarithmic axis, 0 dB corresponds with 1 Volt.

---

## Setting up the frequency axis

By activating the choice **FREQUENCY**, a popup menu appears, displaying 15 frequency ranges.

For example, when the **1000 Hz** option is activated, the maximum frequency displayed by the spectrum analyzer will then be 1000 Hz. The resolution is  $(1000\text{Hz}/500)$  2.0 Hz.

The following frequency ranges can be selected: 2.5 Hz, 5 Hz, 10 Hz, 20 Hz, 50 Hz, 100 Hz, 200 Hz, 500 Hz, 1 kHz, 2 kHz, 5 kHz, 10 kHz, 20 kHz, 50 kHz and 100 kHz.

---

## Magnifying the frequency axis

By activating the **FREQ-MAG** choice, a popup menu appears, displaying 6 magnification areas.

When, for example, the **2\*** option has been activated, the frequency-axis will be magnified 2 times. The magnified part of the screen is indicated by two interconnected arrows at the bottom of the screen.

The frequency-axis magnification area can be moved using the **<PgUp>** and **<PgDn>** keys or the mouse by placing the mouse cursor on the interconnected arrows and clicking the left mouse button (while moving the mouse button must be kept pressed). With the **<+>** and **<->** keys the step size can be increased and decreased, respectively.

The following frequency-axis magnification areas can be selected: 1, 2, 4, 5, 10 and 20 times.

---

## Selecting the window

By activating the choice **WINDOW**, a popup menu appears, displaying 5 window types.

These windows are used to reduce calculating errors during the FFT transformation. See at the beginning of this chapter for an explanation about FFT and windows.

The following window types can be selected: rectangle( = no window), Hanning, Hamming, Blackman, Bartlett.

---

## Averaging of spectra

When the spectrum of a non-periodic signal (for example noise) is measured, **AVERAGE** can be used.

By activating the choice **AVERAGE**, a popup menu appears, displaying 8 options. When **AVERAGE** is set to 10, 10 spectra will be measured, calculated and averaged. After calculating each spectrum the results are displayed immediately. The averaging process can be interrupted by pressing the <**Esc**> key or the right mouse button.

The following choices for averaging are available: 1, 2, 5, 10, 20, 50, 100 and 200.

---

## Starting a spectrum measurement

The sampling process is started by activating the choice **MEASURE**.

On the screen the text "MEASURING, PLEASE WAIT ..." appears. After the sampling process the spectrum is calculated using FFT and the message "CALCULATE SPECTRUM 1, PLEASE WAIT ... (Esc; Exit)" appears on the screen. When there are more calculations set by means of the **AVERAGE** menu, the first text will be displayed on the screen followed by the second one.

---

## Measuring a harmonic distortion

By activating **DISTORTION**, a frequency can be indicated by means of the <←↑↓→> keys or the mouse.

The indicated frequency is considered the fundamental frequency.

The total harmonic distortion relative to this fundamental frequency is determined on the basis of the formula:

$$\log \frac{\sqrt{V_2^2 + V_3^2 + V_4^2 + V_5^2 + V_6^2 + V_7^2 + V_8^2 + V_9^2 + \dots}}{V_1}$$

$V_1$  is the RMS amplitude of the fundamental frequency.  $V_2 \dots V_{10}$  are the RMS amplitudes of each harmonic. The RMS amplitude of each harmonic is shown in a table.

---

## Calculate the spectrum from the HOLD signal

By activating **HOLD->FFT**, the spectrum of the first 1024 measuring points of the signal measured with the HOLD device is calculated. The frequency-axis and the voltage-axes are adjusted to the value of the HOLD device.

## Chapter 7

# Voltmeter (device: VOLT)

---

---

The **HANDYSCOPE 2** is equipped with a two channel voltmeter with digital display.

The voltmeter functions as follows:

- 200 points are sampled.
- The measured data is processed, e.g. for calculating the RMS value or the mean value. 9 options can be carried out.
- The calculated values are displayed, e.g. add CH1 and CH2 and display on CH1. 16 different display modes are available.

Because of the computations and display modes there are many options ( $\pm 100$ ) to measure a signal with the voltmeter.

---

### Setting up a channel

As noticed, the channels can be configured in many ways. Both channels have equal settings, so only CH1 is discussed here. Activating the choice **CH1 SET** brings up a popup menu in which the settings for CH1 are available.

---

### Setting the input range

By activating the **VOLTS/DIV** choice, a popup menu appears, displaying 10 voltage ranges.

When e.g. **8** has been activated, a voltage range of 8 volts full scale will be set, that is, the maximum voltage to be measured is  $\pm 8$  volt. The **AUTO** option provides for setting the voltage-axis automatically.

The following ranges can be selected: 100 mV, 200 mV, 400 mV, 800 mV, 2 V, 4V, 8 V, 20 V, 40 V and 80 V per division

---

## Setting the signal coupling

By activating the choice **COUPLING AC/DC**, the text changes from **COUPLING AC** to **COUPLING DC** or vice versa. In the hardware, a capacitor is switched into (AC) or out of (DC) the signal path.

In **COUPLING DC** the complete signal (AC+DC) at the input is passed through. In **COUPLING AC** only the AC component of the input signal is passed through. It is then possible to examine e.g. a  $\pm 20$  mV ripple on a 30 V DC voltage, since only the ripple is passed through and the DC voltage not. AC voltages with a frequency lower than  $\pm 4$  Hz are not coupled correctly.

---

## Displaying the measured value

By activating the **DISPLAY** choice, a popup menu appears, displaying 16 options.

The option chosen determines how the data of CH1 or CH2 will be displayed. The options are:

- CH1:** Display data of CH1.
- CH2:** Display data of CH2.
- CH1\*CH2:** Display data of CH1 multiplied with data of CH2.
- CH1/CH2:** Display data of ch 1 divided by data of CH2.
- CH2/CH1:** Display data of ch 2 divided by data of CH1.
- CH1-CH2:** Display data of ch 1 minus data of CH2.
- CH2-CH1:** Display data of ch 2 minus data of CH1.
- CH1+CH2:** Display data of ch 1 plus data of CH2.
- > then:** The data is compared with the HIGH VALUE. When the data is higher than HIGH VALUE, **PASS** is displayed. When the data is smaller than HIGH VALUE, **LO** is displayed.
- < then:** The data is compared with the LOW VALUE. When the data is lower than LOW VALUE, **PASS** is displayed. When the data is higher than LOW VALUE, **HI** is displayed.

**>> COMP:** The data is compared with the LOW VALUE and the HIGH VALUE. When the data is higher than HIGH VALUE, **HI** is displayed. When the data is lower than LOW VALUE, **LO** is displayed. When the data is lower than or equal to HIGH VALUE **AND** higher than or equal to LOW VALUE, **PASS** is displayed.

**<> Hi Lo:** The data is compared with the LOW VALUE and the HIGH VALUE. When the data is higher than HIGH VALUE, **PASS** is displayed. When the data is lower than LOW VALUE, **PASS** is displayed. When the data is lower than or equal to HIGH VALUE **AND** higher than or equal to LOW VALUE, **LO** is displayed.

**MAX:** Display the maximum value of the data.

**MIN:** Display the minimum value of the data.

**LOG(1/2):**

$$20 * \log \frac{\textit{measured value CH1}}{\textit{measured value CH2}}$$

**LOG(2/1):**

$$20 * \log \frac{\textit{measured value CH2}}{\textit{measured value CH1}}$$

---

## Displaying the measured values

The voltmeter can display the measured values in several ways, on 2 to 6 displays. By selecting **DISPLAYS** from the main menu, a popup menu appears in which the number of displays and the display settings can be set.

---

### Set the number of displays

By selecting **NUMBER OF DISPLAYS** a popup menu appears with the choices 2 DISPLAYS, 4 DISPLAYS and 6 DISPLAYS. This corresponds with 1, 2 and 3 displays per channel. When 6 DISPLAYS is selected, for each channel 3 displays are available, all individually configurable. The left hand side displays (1, 3 and 5) are for channel 1, the right hand side displays (2, 4 and 6) are for channel 2.

---

## Selecting the possibilities of the displays

With the choices **SET DISPLAY1** to **SET DISPLAY6** the properties of the displays can be set.

---

## Processing the measured data

By activating **MEASURING**, a popup menu appears, displaying 9 calculations.

The option chosen determines how the data of CH1 (or CH2) will be calculated.

The following options can be selected:

**True RMS:** The true RMS value of the sampled data is calculated. The true RMS value (Root Mean Square) is the value of a casual voltage form, identical to a DC voltage dissipating the same power in a resistance.

An AC voltage of 1 volt (RMS) is identical to a DC voltage of 1 volt. (Most -cheap- voltmeters only point the right value at a true sine voltage when an AC voltage is measured. The **HANDYSCOPE 2** always points the correct value at the true RMS handling.)

**PEAK TO PEAK**

The peak to peak voltage of the sampled data is determined. The peak to peak voltage of a DC voltage is zero. The peak to peak voltage of a true sine with a RMS value of 1 volt is 2.828 volt.

**MEAN:**

The mean value of the sampled data is determined. The mean value of the DC voltage of 1 volt is 1 volt. The mean value of a true sine with a RMS value of 1 volt is 0 volt.

**MAX:**

The maximum value of the sampled data is determined. The maximum value of a DC voltage of 1 volt is 1 volt. The maximum value of a true sine with a RMS value of 1 volt is 1.41 volt.

**MIN:**

The minimum value of the sampled data is determined. The minimum value of a DC voltage of 1 volt is 1 volt. The minimum value of a true sine with a RMS value of 1 volt is -



1.41 volt.

**dBm:** The value of the sampled data is converted into decibels. Converting is done by means of the formula:

$$dBm = 10 * \log \frac{1000 * value^2}{reference\ resistance}$$

With "value" the RMS value of the measured data is meant. The reference resistance can be set with the SET IMPE-DANCE option.

**POWER:** The value of the sampled data is converted into a power. Converting is done by means of the formula:

$$POWER = \frac{value^2}{reference\ resistance}$$

With "value" the RMS value of the measured data is meant. The reference resistance can be set with the SET IMPE-DANCE option.

**CREST:** The value of the sampled data is converted into a crest factor. Converting is done by means of the formula:

$$CREST = \frac{peak\ value}{RMS\text{-}value}$$

The "peak value" is the peak voltage relative to the zero line of the signal.

**FREQ:** The frequency of the offered signal is determined.

---

## Changing the units of measure

The units of measure displayed, can be configured to your own demands. By activating the choice **UNIT**, a popup menu with the choices. When the requested option is activated, this unit will be placed under the display behind the MEASURING mode. At an ACQUIRE TO DISK (or an ACQUIRE TO PRINTER) the unit is placed behind the MEASURING mode as well.

---

## Changing the units per volt

By activating the choice **UNITS/VOLT**, you can enter a factor for the

display. The value filled in will be multiplied with the measured value.  
Example: A thermocouple generating 1 volt per 5 degrees is measured. Then the number of UNITS/VOLT can be set at 5 allowing the direct reading of the correct number of degrees.

When an oscilloscope probe which attenuates 10 times is used, the value 10 can be entered with the UNITS/VOLT option, so the correct voltage values can be read directly.

---

## Relative measurements

By activating the **RELATIVE = ON/OFF** choice, the text changes from RELATIVE = ON to RELATIVE = OFF or vice versa.

The RELATIVE = ON option results in decreasing the displayed value with the value given at the SET REL. VALUE option.

Example: MEASURING is set on MEAN and DISPLAY is set on CH 1. When a DC voltage of 10 volt is offered, the voltmeter will point at 10 volt. When the value 10 is filled in with the SET REL. VALUE option and RELATIVE = ON is set, the voltmeter will point at 0 volt.

With the RELATIVE = OFF option the measured value is not influenced.

---

## Comparison measurements

For displaying the measured and calculated values, 16 methods are available. Four of those methods are comparison measurements:

- > then HI
- < then LO
- >< COMP
- <> LO HI

These measurements require a HIGH and a LOW value. With the choices **SET HIGH VALUE** and **SET LO VALUE** the two values can be set. Activating the choices will bring up a dialog box in which the size of the level can be entered in volts.

---

## Setting the impedance

The dBm and POWER measurements require a reference resistance. The value of the resistance can be set by activating **SET IMPEDANCE** from the CH1 SET menu.


The value has to be entered in Ohm. The default value is 600  $\Omega$ .

---

## Setting the frequency range

The voltmeter has a limited frequency range in which the measurements are performed correctly. This is caused by the fact that the voltmeter takes 200 samples, using a certain sampling frequency.

If the periodical time of the input signal is much larger than the measuring time, a wrong value is measured. See the next illustration.

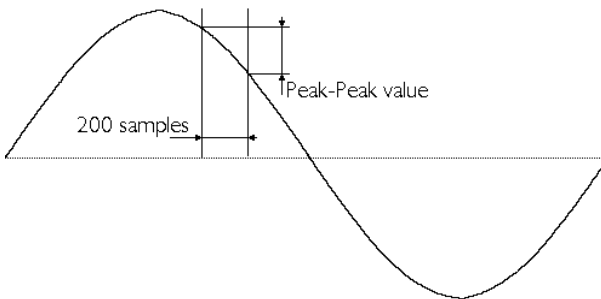

If the time in which the 200 samples are taken is too short in relation to the periodical time of the input signal, **aliasing** can occur ( see also the chapter about the oscilloscope).

To avoid errors like the one mentioned above, the frequency range of the voltmeter has to be set properly. The sampling frequency is then changed. By activating the **FREQUENCY** choice, a popup menu appears, displaying 7 center frequencies. A frequency range is determined from  $0.2 \times f_{\text{center}}$  to  $10 \times f_{\text{center}}$ .

For example, when **50 Hz** is chosen, signals with a frequency between 10Hz to 500 Hz will be calculated correctly.

The following center frequencies can be selected: 10 Hz, 50 Hz, 100 Hz, 500 Hz, 1 kHz, 5 kHz and 10 kHz.

---

## Perform measurements

By activating the **MEASURE/FREEZE** choice from the main menu, the text in the menu changes from MEASURE to FREEZE or vice versa.

In the MEASURE position 200 sample values are taken and from that a determined quantity will be calculated. The quantity to be determined can be set with the CH1 SET menu, MEASURING option.

The last measured values are displayed in the FREEZE position.

By activating the choice **ONE SHOT** from the main menu one measurement is taken and from that the data will be calculated and displayed.

This menu is only available when the MEASURE/FREEZE choice is in the FREEZE position.



---

**Note** A measurement consists of three successive measurements which are averaged. In between these measurements the display is updated. If the voltmeter has to perform an auto range while measuring in one shot, as much as necessary measurements are taken until three measurements are taken in the final input range.

---

---

## Storing measurement values on disk or paper

The voltmeter can store measurement values on disk or print them on paper. This is done in a completely different way to the other instruments.

The voltmeter can be set to measure (acquire) at fixed times. The measured value will then be stored on disk or sent to the printer.



---

**Note** When only one printer port is available, it is not possible to send the measurements to the printer

---

---

## Setting the time between two measurements

By activating the choice **TIME** from the main menu, the time between two measurements can be set. A dialog box appears in which the time can be entered, in seconds. The time has to be between 0 and 300 seconds.



---

**Note** When a time **shorter than 0.5 seconds** is entered, the acquisition speed is determined by the changes of display 1 or display 2. Each time a measurement value at the screen changes, the measured value is stored on disk or printed.

---

---

## Start an acquisition

By activating the choice **ACQUIRE**, a popup menu is displayed, from which a selection can be made whether the data has to be stored on disk or sent to the printer.

The choice **DISK** will cause the measurement data to be stored on disk. After activating the choice, a dialog box appears in which a name for the file has to be entered. If a file with that name exists, you will be asked whether that file can be overwritten. The data in that file will be lost. After confirmation, measuring starts. At the fixed times a measurement is taken and stored on disk. Measuring can be cancelled by pressing **<Esc>**.

The choice **PRINTER** will cause the measurement data to be sent to a printer. After activating, measuring starts. At the fixed times a measurement is taken and the value is sent to the printer. Measuring can be cancelled by pressing **<Esc>**.

In both modes, the measurement values are preceded by a block of information. In that block is indicated how the channels are set and how the HIGH, LOW and RELATIVE LEVELS are set. Each measurement is preceded by the time and date of the measurement.

If a measured value is higher than the selected input range, '-----' is displayed. This will also be stored on disk or printed.

---

## Changing the display characters

By activating the **DIGIT SET** choice, a popup menu appears, displaying 5 digit thicknesses.

For example, when the **4-PIXELS** choice has been activated, the digit thickness will be 4 pixels.

The following digit thicknesses can be selected: 2, 4, 6, 8 and 10 pixels.

The transient recorder is a two channel, direct registering measuring instrument, displaying the changes of the input signal graphically on the screen or on paper.

The transient recorder measures at settable, fixed times and processes the measured value if necessary. The number of measurements to be taken is also settable.



---

**Note** The transient recorder displays a measured sample immediately, the oscilloscope takes all samples and then displays the complete page.

---

The transient recorder main menu has several items that are similar to the oscilloscope, therefore they are not discussed in this chapter.

---

## Setting the measuring type

By activating **MEAS. MODE**, a popup menu appears, displaying 5 measuring methods.

<b>MOMENTAL</b>	the momentary value will be measured
<b>true RMS</b>	the true RMS (= effective) value will be measured
<b>MEAN</b>	the mean value will be measured
<b>MAX</b>	the maximum value of the signal will be measured
<b>MIN</b>	the minimum value of the signal will be measured

The true RMS, MEAN, MAX and MIN values are calculated from  $\pm 200$  samples. To avoid measuring errors the frequency of the measured signal must be around the center frequency set (See also Setting the frequency range in the chapter Voltmeter).



---

**Note** When true RMS, MEAN, MIN or MAX is selected, the minimum sampling time will be 0.5 sec.

---

---

## Setting the frequency range

By activating the **FREQUENCY** choice, a popup menu appears, displaying 7 center frequencies. A frequency range is determined from  $0.2 \times f_{\text{center}}$  to  $10 \times f_{\text{center}}$ .

For example, when the **50 Hz** option has been activated, the signals with a frequency of 10 Hz to 500 Hz will be calculated correctly.

The frequency setting is only effective when True RMS (= effective), MEAN, MAX or MIN values are measured.

The following center frequencies can be selected: 10 Hz, 50 Hz, 100 Hz, 500 Hz, 1 kHz, 5 kHz and 10 kHz.



---

**Note** When the 10 Hz center frequency has been selected the minimum sampling time will be 1.5 sec.

---

---

## Setting the sampling time

By activating **SAMPLE TIME** the sampling time between two measured values can be given.

For the sampling time a value between 0.01 and 300 sec can be given. Then the total measuring time can be  $300 \times 30,000 = 9,000,000$  sec (= 104.16 days).



---

**Note** On a PC-XT the minimum sampling time is 0.05 sec.

---



---

**Note** When no momentary values are taken (see MEAS. MODE) the minimum sampling time is 0.5 sec, or 1.5 sec at a frequency setting of 10Hz

---



---

## Setting the number of samples

By activating the **SAMPLES** menu, the number of samples can be given. For the number of samples a value between 1 and 30,000 can be given. Then the total measuring time can be  $300 \cdot 30,000 = 9,000,000$  sec (= 104.16 days).

---

## Clear the screen

By activating the **CLEAR SCR** choice, the screen of the transient recorder is erased.

---

## Start a measurement

When all settings are set, a measurement can be started, by activating **MEASURE** from the main menu. First a name has to be entered for the file the data will be stored in. If the name of an existing file is entered, you will be asked whether this file can be overwritten by the new data. The old data will be destroyed.

When the name is entered, sampling starts. This is indicated by a window with the text:

**MEASURING...**, **Esc: interrupt measuring.**

At fixed times a sample is taken, until the number of samples to be taken is reached. While sampling, the sample number, the time and the measured value are displayed inverted.



---

**Note** When the **HANDYSCOPE 2** is connected to a relative slow computer, it may occur that, depending on the selected samplertime, the sample number, time and value are not being displayed. Only if enough time is available, the items are displayed.

---

When the total measurement time is completed, the window with the text disappears and the data is saved on disk.

A crosshair, used for measuring, now appears. See the chapter oscilloscope HOLD for information about controlling the crosshair. During measuring with the crosshair, the value, the sample number and the time of the selected sample are displayed.

When more than 500 samples are taken, the keys <PgUp> and <PgDn> provide switching between the pages with data. The current page number is displayed in the upper right corner of the screen. With <+> and <-> the step size can be changed, <+> increases the step size, <-> decreases the step size.

As with the oscilloscope, the data can be shifted up and down on the screen. This is done in the same way as with the oscilloscope.



---

**Note** When switching between pages of data, or shifting the signal, each time the complete signal is read from disk, which may take some time.

---

---

## Go to a specific sample

By activating the **GO TO** choice a sample number to be jumped to can be given. For example, when a measurement has been made involving 15,000 values, then the 15,000<sup>th</sup> sample value can be jumped to straight away by entering 15,000.

# Chapter 9

## Specifications

---

---

---

### Hardware

---

#### A/D convertor

---

sampling frequency	200 kHz
input sensitivity (for CH 1 and 2; full scale)	
100 mvolt	(resolutie 48.8 $\mu$ volt)
200 mvolt	(resolutie 97.6 $\mu$ volt)
400 mvolt	(resolutie 195.3 $\mu$ volt)
800 mvolt	(resolutie 390.6 $\mu$ volt)
2 volt	(resolutie 976.5 $\mu$ volt)
4 volt	(resolutie 1.95 mvolt)
8 volt	(resolutie 3.91 mvolt)
20 volt	(resolutie 9.76 mvolt)
40 volt	(resolutie 19.6 mvolt)
80 volt	(resolutie 39.1 mvolt)
maximum overload voltage	200 volt AC 50 Hz
maximum overload voltage 1:10 probe	600 volt AC 50 Hz
input impedance	1 Mohm/20 pF
coupling	AC/DC
resolution	12 bits 0.025 %
linearity	12 bits
accuracy	0.2 % $\pm$ 1 LSB
bandwidth	DC to 100 kHz

---

#### General

---

operation temperature	0 °C .. +50 °C
storage temperature	-10 °C .. +70 °C
relative humidity	5 % .. 90 %
dimensions h x l x b	1.5" x 5.7" x 3.3" / 40 x 145 x 85 mm
weight	approx. 350 gram
cable length	approx. 67 inch (1.7 m)



---

## Spectrum analyzer

frequency range	0.00488 - 2,5 Hz (resolution 0.00488 Hz)
	0.00976 - 5 Hz (resolution 0.00976 Hz)
	0.01953 - 10 Hz (resolution 0.01953 Hz)
	0.0488 - 25 Hz (resolution 0.0488 Hz)
	0.0976 - 50 Hz (resolution 0.0976 Hz)
	0.1953 - 100 Hz (resolution 0.1953 Hz)
	0.488 - 250 Hz (resolution 0.488 Hz)
	0.976 - 500 Hz (resolution 0.9765 Hz)
	1.953 - 1000 Hz (resolution 1.953 Hz)
	4.88 - 2500 Hz (resolution 4.882 Hz)
	9.76 - 5000 Hz (resolution 9.765 Hz)
	19.5 - 10000 Hz (resolution 19.53 Hz)
	48.8 - 25000 Hz (resolution 48.82 Hz)
	97.6 - 50000 Hz (resolution 97.65 Hz)
	195.3 - 100000 Hz (resolution 195.3 Hz)
frequency-axis magnification	2 ... 20 times
y-axis	linear/dB
windows	rectangle, Hanning, Hamming, Blackman, Bartlett window
distortion	measuring 10 harmonics of the ground frequency

---

## True RMS voltmeter

measuring method	true RMS, mean, min, max, momentary, dBm, power, crest factor and frequency values
display abilities:	CH1, CH2, CH1*CH2, CH1/CH2, CH2/CH1, CH1-CH2, CH2-CH1, CH1+CH2, > then, < then, >< COMP, <>HI LO, MAX, MIN, LOG (CH1/CH2) and LOG (CH2/CH1)
display height	± 1..2 inch ( ± 25..50 mm) depending on the monitor
frequency range	10 Hz, 50 Hz, 100 Hz, 500 Hz, 1 kHz, 5 kHz, 10 kHz
voltage range	100 mvolt .. 80 volt full scale
maximum overload voltage	200 volt peak to peak
maximum overload voltage 1:10 probe	600 volt peak to peak
data acquire	to disk and to printer

---

## Transient recorder

measuring time between two measuring points	0.01 ..300 sec
	at a PC-XT the minimum time is 0.05 sec
maximum number of measuring points to be taken	30,000
time-axis magnification	2 ..20 times
gain factor	-5 ..5 times
offset factor	-10,000 .. 10,000
measuring method	true RMS, mean, min, max and momentary

If you have any suggestions and/or remarks regarding the program, the **HANDYSCOPE 2** or the manual, please contact:

✉ **TiePie engineering**  
**P.O. Box 290**  
**8600 AG SNEEK**  
**The Netherlands**  
Fax: +31 515 418 819

🏠 TiePie engineering  
Koperslagersstraat 37  
8601 WL SNEEK  
The Netherlands  
Tel.: +31 515 415 416

Web site: <http://www.tiepie.nl>  
Email: [info@tiepie.nl](mailto:info@tiepie.nl)