


# Handyprobe HP3

## User manual



TiePie engineering

ATTENTION!

Measuring directly on the **line voltage** can be very dangerous.

Copyright ©2019 TiePie engineering.  
All rights reserved.

Revision 2.24, August 2019

Despite the care taken for the compilation of this user manual, TiePie engineering can not be held responsible for any damage resulting from errors that may appear in this manual.

# Contents

<b>1</b>	<b>Safety</b>	<b>1</b>
<b>2</b>	<b>Declaration of conformity</b>	<b>3</b>
<b>3</b>	<b>Introduction</b>	<b>5</b>
3.1	Differential input . . . . .	5
3.1.1	Differential test lead . . . . .	7
3.2	Sampling . . . . .	7
3.3	Sample frequency . . . . .	8
3.3.1	Aliasing . . . . .	9
3.4	Digitizing . . . . .	10
3.5	Signal coupling . . . . .	11
<b>4</b>	<b>Driver installation</b>	<b>13</b>
4.1	Introduction . . . . .	13
4.2	Where to find the driver setup . . . . .	13
4.3	Executing the installation utility . . . . .	13
<b>5</b>	<b>Hardware installation</b>	<b>17</b>
5.1	Power the instrument . . . . .	17
5.2	Connect the instrument to the computer . . . . .	17
5.3	Plug into a different USB port . . . . .	17
<b>6</b>	<b>Specifications</b>	<b>19</b>
6.1	Acquisition system . . . . .	19
6.2	Trigger system . . . . .	19
6.3	Interface . . . . .	19
6.4	Power . . . . .	20
6.5	Physical . . . . .	20
6.6	I/O connectors . . . . .	20
6.7	System requirements . . . . .	20
6.8	Environmental conditions . . . . .	20
6.9	Certifications and Compliances . . . . .	20
6.10	Measure lead . . . . .	21




**When working with electricity, no instrument can guarantee complete safety. It is the responsibility of the person who works with the instrument to operate it in a safe way. Maximum security is achieved by selecting the proper instruments and following safe working procedures. Safe working tips are given below:**

- Always work according (local) regulations.
- Work on installations with voltages higher than 25 V<sub>AC</sub> or 60 V<sub>DC</sub> should only be performed by qualified personnel.
- Avoid working alone.
- Observe all indications on the Handyprobe HP3 before connecting any wiring
- The Handyprobe HP3 is designed for CAT II measurement category: Maximum working voltage 600 V<sub>RMS</sub> or 800 V<sub>DC</sub>. Do not exceed the rated voltage.
- Check the probes/test leads for damages. Do **not** use them if they are damaged
- Take care when measuring at voltages higher than 25 V<sub>AC</sub> or 60 V<sub>DC</sub>.
- Do not operate the equipment in an explosive atmosphere or in the presence of flammable gases or fumes.
- Do not use the equipment if it does not operate properly. Have the equipment inspected by qualified service personal. If necessary, return the equipment to TiePie engineering for service and repair to ensure that safety features are maintained.



## Declaration of conformity

2



TiePie engineering  
Koperslagersstraat 37  
8601 WL Sneek  
The Netherlands

### EC Declaration of conformity

We declare, on our own responsibility, that the product

**Handyprobe HP3-5**  
**Handyprobe HP3-20**  
**Handyprobe HP3-100**

for which this declaration is valid, is in compliance with

EN 55011:2009/A1:2010      IEC 61000-6-1/EN 61000-6-1:2007  
EN 55022:2006/A1:2007      IEC 61000-6-3/EN 61000-6-3:2007

according the conditions of the EMC standard 2004/108/EC,

also with

Canada: ICES-001:2004      Australia/New Zealand: AS/NZS

and

IEC 61010-1:2001/EN      USA: UL61010-1: 2004

and is categorized as CAT II 600 Vrms, 800 Vpk, 800 Vdc

Sneek, 1-11-2010  
ir. A.P.W.M. Poelsma



## Environmental considerations

This section provides information about the environmental impact of the Handyprobe HP3.

### End-of-life handling

Production of the Handyprobe HP3 required the extraction and use of natural resources. The equipment may contain substances that could be harmful to the environment or human health if improperly handled at the Handyprobe HP3's end of life.

In order to avoid release of such substances into the environment and to reduce the use of natural resources, recycle the Handyprobe HP3 in an appropriate system that will ensure that most of the materials are reused or recycled appropriately.

The symbol shown below indicates that the Handyprobe HP3 complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE).



### Restriction of Hazardous Substances

The Handyprobe HP3 has been classified as Monitoring and Control equipment, and is outside the scope of the 2002/95/EC RoHS Directive.





Before using the Handyprobe HP3 first read chapter 1 about safety.

Many technicians investigate electrical signals. Though the measurement may not be electrical, the physical variable is often converted to an electrical signal, with a special transducer. Common transducers are accelerometers, pressure probes, current clamps and temperature probes. The advantages of converting the physical parameters to electrical signals are large, since many instruments for examining electrical signals are available.

The Handyprobe HP3 is a single channel, 10 bits measuring instrument with differential input with high input range. The Handyprobe HP3 is available in several models with different maximum sampling frequencies and different maximum streaming rates.

	HP3-100	HP3-20	HP3-5
Maximum sampling rate	100 MS/s	20 MS/s	5 MS/s
Maximum streaming rate	10 MS/s	2 MS/s	500 kS/s

Table 3.1: Maximum sampling frequencies

The Handyprobe HP3 is available with two memory configurations, these are:

Memory	HP3-100	HP3-20	HP3-5
Standard model	16 kS	16 kS	16 kS
Option XM	1 MS	1 MS	1 MS

Table 3.2: Maximum record lengths per channel

With the accompanying software the Handyprobe HP3 can be used as an oscilloscope, a spectrum analyzer, a true RMS voltmeter or a transient recorder. All instruments measure by sampling the input signals, digitizing the values, process them, save them and display them.

### 3.1 Differential input

Most oscilloscopes are equipped with standard, single ended inputs, which are referenced to ground. This means that one side of the input is always connected to ground and the other side to the point of interest in the circuit under test.

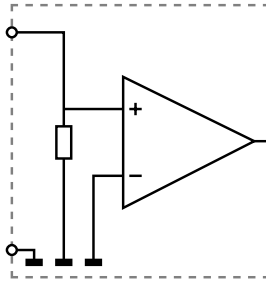


Figure 3.1: Single ended input

Therefore the voltage that is measured with an oscilloscope with standard, single ended inputs is always measured between that specific point and ground.

When the voltage is not referenced to ground, connecting a standard single ended oscilloscope input to the two points would create a short circuit between one of the points and ground, possibly damaging the circuit and the oscilloscope.

A safe way would be to measure the voltage at one of the two points, in reference to ground and at the other point, in reference to ground and then calculate the voltage difference between the two points. On most oscilloscopes this can be done by connecting one of the channels to one point and another channel to the other point and then use the math function  $CH1 - CH2$  in the oscilloscope to display the actual voltage difference.

There are some disadvantages to this method:

- a short circuit to ground can be created when an input is wrongly connected
- to measure one signal, two channels are occupied
- by using two channels, the measurement error is increased, the errors made on each channel will be combined, resulting in a larger total measurement error
- The Common Mode Rejection Ratio (CMRR) of this method is relatively low. If both points have a relative high voltage, but the voltage difference between the two points is small, the voltage difference can only be measured in a high input range, resulting in a low resolution

A much better way is to use an oscilloscope with a differential input.

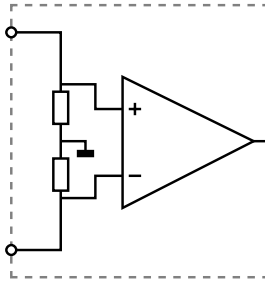


Figure 3.2: Differential input

A differential input is not referenced to ground, but both sides of the input are “floating”. It is therefore possible to connect one side of the input to one point in the circuit and the other side of the input to the other point in the circuit and measure the voltage difference directly.

Advantages of a differential input:

- No risk of creating a short circuit to ground
- Only one channel is required to measure the signal
- More accurate measurements, since only one channel introduces a measurement error
- The CMRR of a differential input is high. If both points have a relative high voltage, but the voltage difference between the two points is small, the voltage difference can be measured in a low input range, resulting in a high resolution

### 3.1.1 Differential test lead

The Handyprobe HP3 comes with a special differential test lead. This test lead is specially designed to ensure a good CMRR.

The special heat resistant differential test lead provided with the Handyprobe HP3 is designed to be immune for noise from the surrounding environment.

## 3.2 Sampling

When sampling the input signal, samples are taken at fixed intervals. At these intervals, the size of the input signal is converted to a number. The accuracy of this number depends on the resolution of the instrument. The higher the resolution, the smaller the voltage steps in which the input range of the instrument is divided. The acquired numbers can be used for various purposes, e.g. to create a graph.

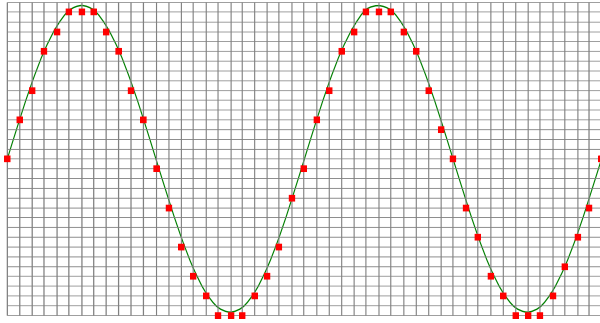


Figure 3.3: Sampling

The sine wave in figure 3.3 is sampled at the dot positions. By connecting the adjacent samples, the original signal can be reconstructed from the samples. You can see the result in figure 3.4.

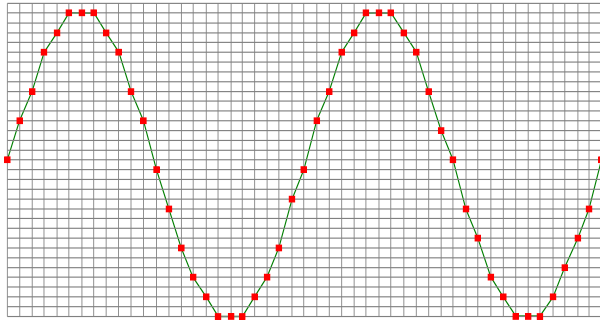


Figure 3.4: "connecting" the samples

### 3.3 Sample frequency

The rate at which the samples are taken is called the **sampling frequency**, the number of samples per second. A higher sampling frequency corresponds to a shorter interval between the samples. As is visible in figure 3.5, with a higher sampling frequency, the original signal can be reconstructed much better from the measured samples.

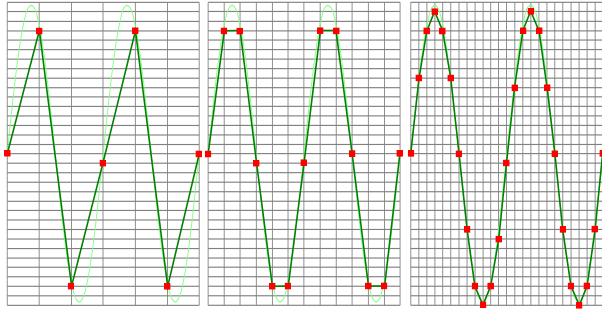


Figure 3.5: The effect of the sampling frequency

The sampling frequency must be higher than 2 times the highest frequency in the input signal. This is called the **Nyquist frequency**. Theoretically it is possible to reconstruct the input signal with more than 2 samples per period. In practice, 10 to 20 samples per period are recommended to be able to examine the signal thoroughly.

### 3.3.1 Aliasing

When sampling an analog signal with a certain sampling frequency, signals appear in the output with frequencies equal to the sum and difference of the signal frequency and multiples of the sampling frequency. For example, when the sampling frequency is 1000 Hz and the signal frequency is 1250 Hz, the following signal frequencies will be present in the output data:

Multiple of sampling frequency	1250 Hz signal	-1250 Hz signal
...		
-1000	$-1000 + 1250 = \mathbf{250}$	$-1000 - 1250 = -2250$
0	$0 + 1250 = 1250$	$0 - 1250 = -1250$
1000	$1000 + 1250 = 2250$	$1000 - 1250 = -250$
2000	$2000 + 1250 = 3250$	$2000 - 1250 = 750$
...		

Table 3.3: Aliasing

As stated before, when sampling a signal, only frequencies lower than half the sampling frequency can be reconstructed. In this case the sampling frequency is 1000 Hz, so we can only observe signals with a frequency ranging from 0 to 500 Hz. This means that from the resulting frequencies in the table, we can only see the 250 Hz signal in the sampled data. This signal is called an **alias** of the original signal.

If the sampling frequency is lower than twice the frequency of the input signal, **aliasing** will occur. The following illustration shows what happens.

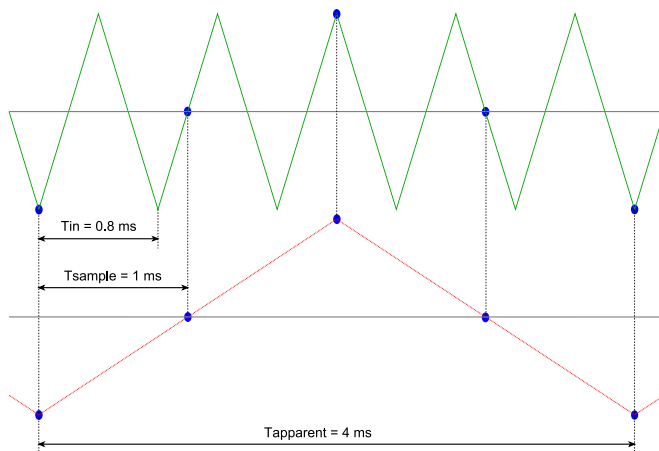


Figure 3.6: Aliasing

In figure 3.6, the green input signal (top) is a triangular signal with a frequency of 1.25 kHz. The signal is sampled with a frequency of 1 kHz. The corresponding sampling interval is  $1/1000\text{Hz} = 1\text{ms}$ . The positions at which the signal is sampled are depicted with the blue dots. The red dotted signal (bottom) is the result of the reconstruction. The period time of this triangular signal appears to be 4 ms, which corresponds to an apparent frequency (alias) of 250 Hz ( $1.25 \text{ kHz} - 1 \text{ kHz}$ ).



To avoid aliasing, always start measuring at the highest sampling frequency and lower the sampling frequency if required.

### 3.4 Digitizing

When digitizing the samples, the voltage at each sample time is converted to a number. This is done by comparing the voltage with a number of levels. The resulting number is the number corresponding to the level that is closest to the voltage. The number of levels is determined by the resolution, according to the following relation:  $LevelCount = 2^{Resolution}$ .

The higher the **resolution**, the more levels are available and the more accurate the input signal can be reconstructed. In figure 3.7, the same signal is digitized, using two different amounts of levels: 16 (4-bit) and 64 (6-bit).

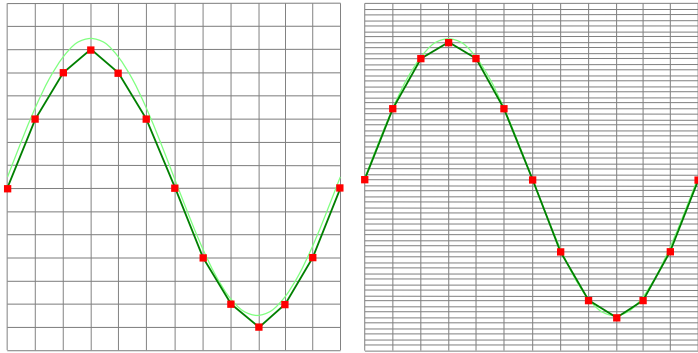


Figure 3.7: The effect of the resolution

The Handyprobe HP3 measures at 10 bit resolution ( $2^{10}=1024$  levels). The smallest detectable voltage step depends on the input range. This voltage can be calculated as:

$$\text{VoltageStep} = \text{FullInputRange} / \text{LevelCount}$$

For example, the 200 mV range ranges from -200 mV to +200 mV, therefore the full range is 400 mV. This results in a smallest detectable voltage step of  $0.400 \text{ V} / 1024 = 0.3906 \text{ mV}$ .

### 3.5 Signal coupling

The Handyprobe HP3 has two different settings for the signal coupling: AC and DC. In the setting DC, the signal is directly coupled to the input circuit. All signal components available in the input signal will arrive at the input circuit and will be measured.

In the setting AC, a capacitor will be placed between the input connector and the input circuit. This capacitor will block all DC components of the input signal and let all AC components pass through. This can be used to remove a large DC component of the input signal, to be able to measure a small AC component at high resolution.




---

When measuring DC signals, make sure to set the signal coupling of the input to DC.

---







Before connecting the Handyprobe HP3 to the computer, the drivers need to be installed.

## 4.1 Introduction

To operate a Handyprobe HP3, a driver is required to interface between the measurement software and the instrument. This driver takes care of the low level communication between the computer and the instrument, through USB. When the driver is not installed, or an old, no longer compatible version of the driver is installed, the software will not be able to operate the Handyprobe HP3 properly or even detect it at all.

The installation of the USB driver is done in a few steps. Firstly, the driver has to be pre-installed by the driver setup program. This makes sure that all required files are located where Windows can find them. When the instrument is plugged in, Windows will detect new hardware and install the required drivers.

## 4.2 Where to find the driver setup

The driver setup program and measurement software can be found in the download section on TiePie engineering's website and on the CD-ROM that came with the instrument. It is recommended to install the latest version of the software and USB driver from the website. This will guarantee the latest features are included.

## 4.3 Executing the installation utility

To start the driver installation, execute the downloaded driver setup program, or the one on the CD-ROM that came with the instrument. The driver install utility can be used for a first time installation of a driver on a system and also to update an existing driver.

The screen shots in this description may differ from the ones displayed on your computer, depending on the Windows version.

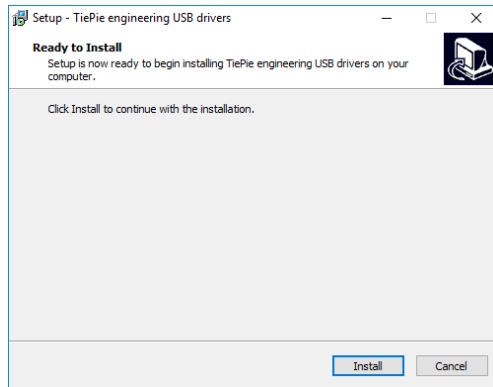


Figure 4.1: Driver install: step 1

When drivers were already installed, the install utility will remove them before installing the new driver. To remove the old driver successfully, **it is essential** that the Handyprobe HP3 is disconnected from the computer prior to starting the driver install utility.

Clicking ***“Install”*** will remove existing drivers and install the new driver. A *remove entry* for the new driver is added to the software applet in the Windows control panel.

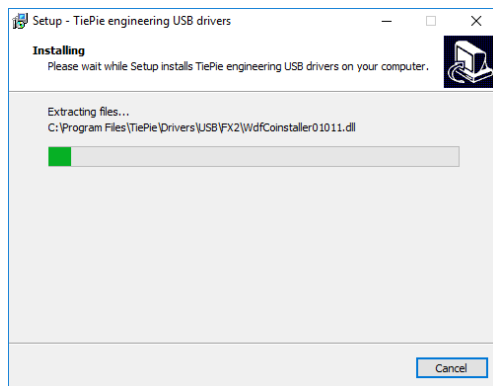


Figure 4.2: Driver install: Copying files

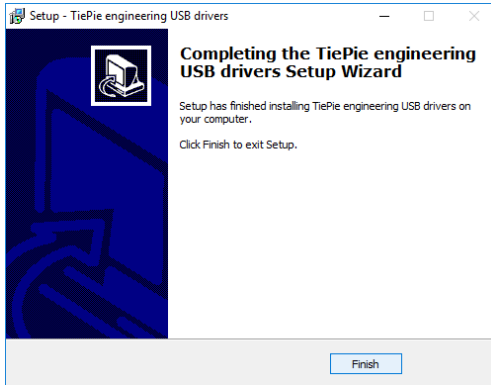


Figure 4.3: Driver install: Finished





Drivers have to be installed before the Handyprobe HP3 is connected to the computer for the first time. See chapter 4 for more information.

## 5.1 Power the instrument

The Handyprobe HP3 is powered by the USB, no external power supply is required. Only connect the Handyprobe HP3 to a bus powered USB port, otherwise it may not get enough power to operate properly.

## 5.2 Connect the instrument to the computer

After the new driver has been pre-installed (see chapter 4), the Handyprobe HP3 can be connected to the computer. When the Handyprobe HP3 is connected to a USB port of the computer, Windows will detect new hardware.

Depending on the Windows version, a notification can be shown that new hardware is found and that drivers will be installed. Once ready, Windows will report that the driver is installed.

When the driver is installed, the measurement software can be installed and the Handyprobe HP3 can be used.

## 5.3 Plug into a different USB port

When the Handyprobe HP3 is plugged into a different USB port, some Windows versions will treat the Handyprobe HP3 as different hardware and will install the drivers again for that port. This is controlled by Microsoft Windows and is not caused by TiePie engineering.



## Specifications

### 6.1 Acquisition system

Number of input channels	1 analog		
Connector	Isolated 4mm banana sockets		
Type	Differential		
Resolution	10 bit		
Amplitude Accuracy	0.3% of full scale		
Ranges (full scale)	±200 mV ±2 V ±20 V ±200 V	±400 mV ±4 V ±40 V ±400 V	±800 mV ±8 V ±80 V ±800 V
Coupling	AC/DC		
Impedance	2.1 M $\Omega$ / 15 pF		
Protection	600 V <sub>RMS</sub> CAT II; derated at 3 dB/decade above 20 kHz to 25 V <sub>pk-pk</sub> at 50 MHz		
Maximum Common Mode voltage	200 mV to 8 V range: 12 V 20 V to 80 V range: 120 V 200 V to 800 V range : 800 V		
Common Mode Rejection Ratio	60 dB		
Bandwidth (-3dB)	50 MHz		
AC coupling cut off frequency (-3dB)	±1.5 Hz		
Rise time	10 ns		
Overshoot	1 %		
	HP3-100	HP3-20	HP3-5
Maximum sampling rate	100 MS/s	20 MS/s	5 MS/s
Maximum streaming rate	10 MS/s	2 MS/s	500 kS/s
Sampling source	internal, quartz		
Accuracy	±0.01%		
Stability	±100 ppm over -40°C to +85°C		
Memory	Option XM 1 MSamples	standard model 16 kSamples	

### 6.2 Trigger system

System	digital, 2 levels
Source	CH1
Trigger modes	rising slope, falling slope
Level adjustment	0 to 100% of full scale
Hysteresis adjustment	0 to 100% of full scale
Resolution	0.39% (8 bits)
Pre trigger	0 to 1 MSamples (0 to 100%, one sample resolution)
Post trigger	0 to 1 MSamples (0 to 100%, one sample resolution)
Trigger hold-off	0 to 4 MSamples, 1 sample resolution

### 6.3 Interface

Interface	USB 2.0 High Speed (480 Mbit/s) (USB 1.1 Full Speed (12 Mbit/s) compatible)
-----------	--

## 6.4 Power

Power	from USB port
Consumption	5 V <sub>DC</sub> , 400 mA max

## 6.5 Physical

Instrument height	25 mm / 1.0"
Instrument length	177 mm / 6.9"
Instrument width	68 mm / 2.7"
Weight	290 gram / 10.2 ounce
USB cord length	1.8 m / 71"
Test lead length	1.9 m / 75"

## 6.6 I/O connectors

CH1	isolated banana sockets
USB	fixed cable with type A plug

## 6.7 System requirements

PC I/O connection	USB 2.0 High Speed (480 Mbit/s) (USB 1.1 Full Speed (12 Mbit/s) and USB 3.0 compatible)
Operating System	Windows 7 / 8 / 10

## 6.8 Environmental conditions

Operating	
Ambient temperature	0°C to 55°C
Relative humidity	10 to 90% non condensing
Storage	
Ambient temperature	-20°C to 70°C
Relative humidity	5 to 95% non condensing

## 6.9 Certifications and Compliances

CE mark compliance	Yes
RoHS	Yes



## 6.10 Measure lead

Model	TP-C812A
Type	differential
Connectors	
Instrument side	dual 4 mm red and black shrouded banana plugs, 19 mm apart
Test point side	red and black 4 mm shrouded banana plugs
Bandwidth	8 MHz
Safety	CAT III, 1000 V, double isolated
Dimensions	
Total length	2000 mm
Length to split	800 mm
Length individual ends	1200 mm
Weight	75 g
Color	black
Heat resistant	yes
Certification and compliances	
CE conformity	yes
RoHS	yes
Accessories	
Color coding rings	5 x 3 rings, various colors
Suitable instrument	Handyprobe HP3

## 6.11 Package contents

The Handyprobe HP3 is available as standard set and can be delivered with option **PS** Professional Set. See below for more details.

Professional Set	
Container	BB271 Carry case
Instrument	Handyprobe HP3
Test lead	Measure Lead TP-C812A
Accessories	2 Alligator Clips TP-AC80I, red and black 2 Test Probes TP-TP90, red and black Wrist strap Color coding rings
Software	Windows 7 / 8 / 10 on CDROM
Drivers	Windows 7 / 8 / 10 on CDROM
Manual	Printed instrument manual and software manual
standard set	
Container	cardboard box
Instrument	Handyprobe HP3
Test lead	-
Accessories	-
Software	Windows 7 / 8 / 10 on CDROM
Drivers	Windows 7 / 8 / 10 on CDROM
Manual	Instrument manual and software manual on CDROM



If you have any suggestions and/or remarks regarding this manual, please contact:

TiePie engineering  
Koperslagersstraat 37  
8601 WL SNEEK  
The Netherlands

Tel.: +31 515 415 416  
Fax: +31 515 418 819  
E-mail: [support@tiepie.nl](mailto:support@tiepie.nl)  
Site: [www.tiepie.com](http://www.tiepie.com)



